


**PRE - ASSEMBLY INSTRUCTIONS:**

**Caution:** Check gasket on top of base unit for damage before assembly. If cut or torn, contact Hammond Manufacturing for immediate replacement.

**Note:** When assembling total modular system build from the floor up for assembly ease. Plinth > Base Unit > Terminal

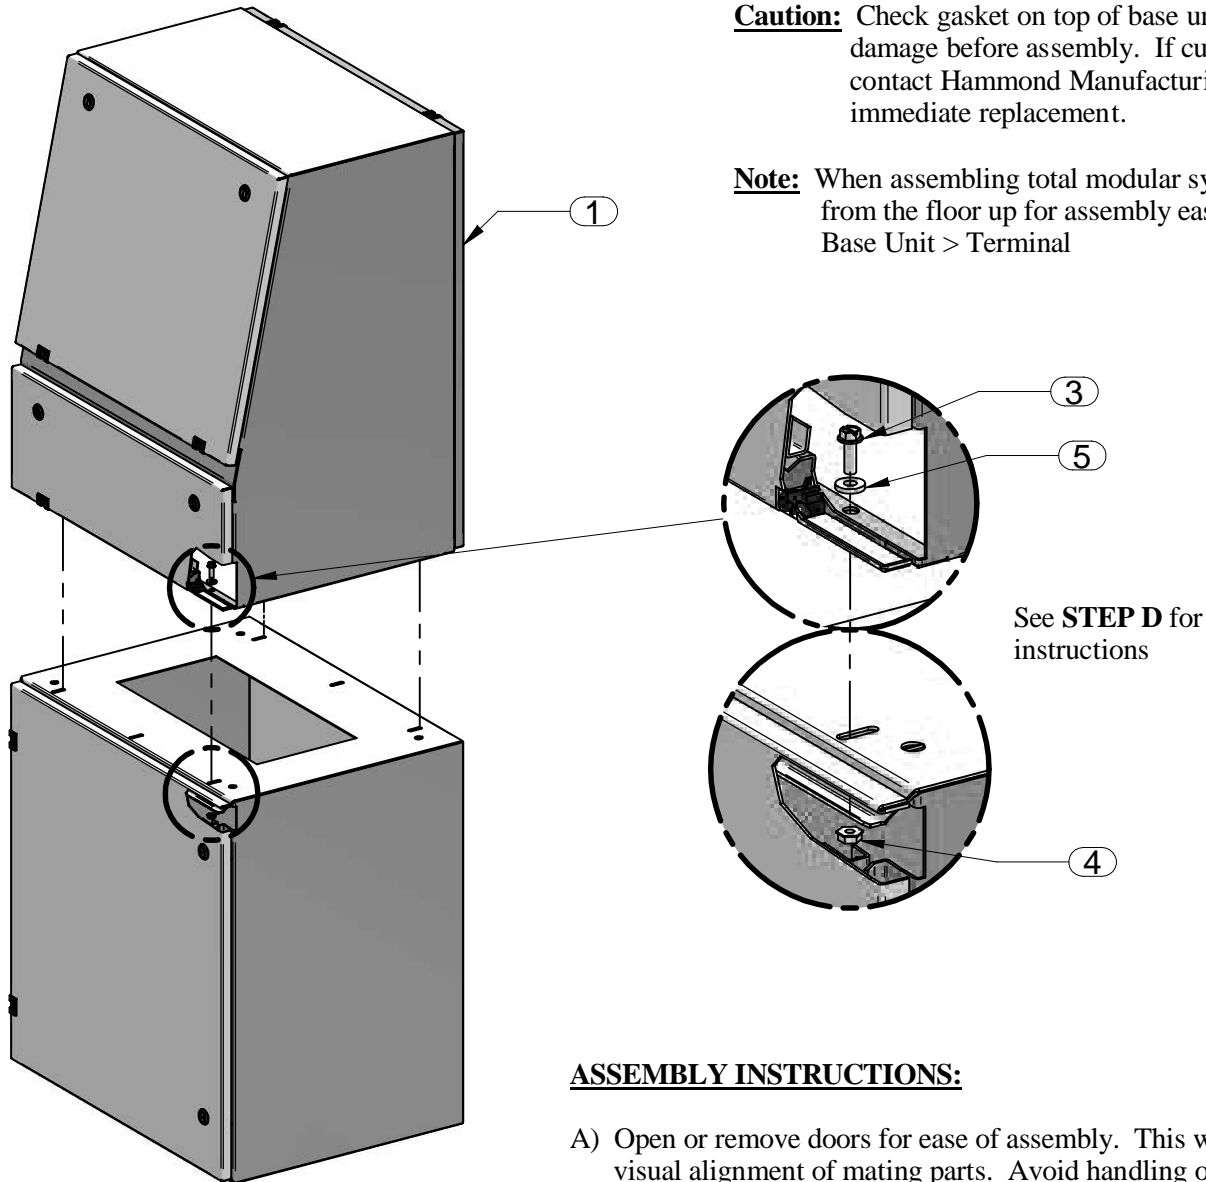

**ASSEMBLY INSTRUCTIONS:**

- A) Open or remove doors for ease of assembly. This will allow for visual alignment of mating parts. Avoid handling or hitting gasket on objects.
- B) Align terminal (item 1) over top opening in base unit (item 2). Side edges of terminal and base unit are to be flush.
- C) Front and rear slots in terminal bottom are to be aligned with mounting slots on base top.
- D) Once the terminal is seated properly on the base, assemble using 1/4-20 x .75 hex head screws, 1/4" sealing washers, and 1/4-20 KEP nuts (items 3, 4, & 5) provided. Torque screws and nuts to 115 in/lbs

PARTS LIST		
ITEM No.	DESCRIPTION	QTY
1	TERMIAL	1
2	BASE UNIT	1
3	1/4-20 X 3/4 HEX CAP SCREW	4, 6 or 8
4	1/4-20 KEP NUT	4, 6 or 8
5	1/4 SEALING WASHER	4, 6 or 8

<p>TOOL BOX</p>	<p>3/8, 7/16" Socket Wrench</p>	<p>3/8, 7/16" Open Wrench</p>
	<p>visit our website @ <a href="http://www.hammondmfg.com">www.hammondmfg.com</a></p>	

