

IE-iMcV- ModeConverter

Operation Manual



FCC Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B computing device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which the user will be required to correct the interference at his own expense.

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

The use of non-shielded I/O cables may not guarantee compliance with FCC RFI limits. This digital apparatus does not exceed the Class B limits for radio noise emission from digital apparatus set out in the Radio Interference Regulation of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de classe B prescrites dans le Règlement sur le brouillage radioélectrique publié par le ministère des Communications du Canada.

Limited Lifetime Warranty

Effective for products of B&B Electronics shipped on or after May 1, 2013, B&B Electronics warrants that each such product shall be free from defects in material and workmanship for its lifetime. This limited lifetime warranty is applicable solely to the original user and is not transferable.

This warranty is expressly conditioned upon proper storage, installation, connection, operation and maintenance of products in accordance with their written specifications.

Pursuant to the warranty, within the warranty period, B&B Electronics, at its option will:

1. Replace the product with a functional equivalent;
2. Repair the product; or
3. Provide a partial refund of purchase price based on a depreciated value.

Products of other manufacturers sold by B&B Electronics are not subject to any warranty or indemnity offered by B&B Electronics, but may be subject to the warranties of the other manufacturers.

Notwithstanding the foregoing, under no circumstances shall B&B Electronics have any warranty obligations or any other liability for: (i) any defects resulting from wear and tear, accident, improper use by the buyer or use by any third party except in accordance with the written instructions or advice of the B&B Electronics or the manufacturer of the products, including without limitation surge and overvoltage conditions that exceed specified ratings, (ii) any products which have been adjusted, modified or repaired by any party other than B&B Electronics or (iii) any descriptions, illustrations, figures as to performance, drawings and particulars of weights and dimensions contained in the B&B Electronics' catalogs, price lists, marketing materials or elsewhere since they are merely intended to represent a general idea of the products and do not form part of this price quote and do not constitute a warranty of any kind, whether express or implied, as to any of the B&B Electronics' products.

THE REPAIR OR REPLACEMENT OF THE DEFECTIVE ITEMS IN ACCORDANCE WITH THE EXPRESS WARRANTY SET FORTH ABOVE IS B&B ELECTRONIC'S SOLE OBLIGATION UNDER THIS WARRANTY. THE WARRANTY CONTAINED IN THIS SECTION SHALL EXTEND TO THE ORIGINAL USER ONLY, IS IN LIEU OF ANY AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, AND ALL SUCH WARRANTIES AND INDEMNITIES ARE EXPRESSLY DISCLAIMED, INCLUDING WITHOUT LIMITATION (I) THE IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE AND OF MERCHANTABILITY AND (II) ANY WARRANTY THAT THE PRODUCTS ARE DO NOT INFRINGE OR VIOLATE THE INTELLECTUAL PROPERTY RIGHTS OF ANY THIRD PARTY. IN NO EVENT SHALL B&B ELECTRONICS BE LIABLE FOR LOSS OF BUSINESS, LOSS OF USE OR OF DATA INTERRUPTION OF BUSINESS, LOST PROFITS OR GOODWILL OR OTHER SPECIAL, INCIDENTAL, EXEMPLARY OR CONSEQUENTIAL DAMAGES. B&B ELECTRONIC SHALL DISREGARD AND NOT BE BOUND BY ANY REPRESENTATIONS, WARRANTIES OR INDEMNITIES MADE BY ANY OTHER PERSON, INCLUDING WITHOUT LIMITATION EMPLOYEES, DISTRIBUTORS, RESELLERS OR DEALERS OF B&B ELECTRONIC WHICH ARE INCONSISTENT WITH THE WARRANTY, SET FORTH ABOVE.

Table of Contents

FCC Radio Frequency Interference Statement	ii
Limited Lifetime Warranty.....	ii
About the IE-iMcV-ModeConverter	1
Configuration Instructions	1
Managed Modules	1
Unmanaged Modules.....	2
Installation	3
LED Operation.....	4
Installation Troubleshooting.....	5
Specifications	5
B&B Electronics Technical Support.....	5
Fiber Optic Cleaning Guidelines.....	6
Electrostatic Discharge Precautions.....	7
Safety Certifications.....	8

About the IE-iMcV-ModeConverter

The IE-iMcV-ModeConverter is SNMP-manageable and installs in the modular, SNMP-manageable iMediaChassis series and in the unmanaged MediaChassis series.

The IE-iMcV-ModeConverters are protocol-independent modules with SFP ports which can provide a single conversion between single-mode and multi-mode fiber, single-mode to single-mode or multi-mode fiber to single strand single-mode fiber. The supported transmission speeds are: 10-155 Mbps and 622-1250 Mbps. Each module includes two SFP ports that can support SFPs with LC connectors. Single-strand fiber versions are also available with SC connectors.

Configuration Instructions

The IE-iMcV-ModeConverter modules have user-configurable features (e.g., LinkLoss, High Speed SFP, and Low Speed SFP). Refer to the chart for information on available features on each module. Instructions for configuring both managed (via an SNMP-compatible management application such as iView²) and unmanaged modules follow.

Managed Modules

To manage one or more iMcV Modules, an SNMP agent must be present in the chassis. The iMediaChassis series, available in 3, 6 or 20 slots in both AC and DC, requires a separate SNMP Management Module. To configure managed modules, install the module first, and then configure it by using the management software. The SNMP management includes an SFP table for both ports if SFPs with DDMI are installed; the SFP table provides information such as temperature, voltage, output power, receive power, vendor serial number, vendor part number and vendor name. The SFP table is viewed through Module Details within iView².


NOTE
<i>Management software overrides any hardware settings (e.g., jumper, switch, etc.), so the module must be configured through the software before beginning normal operation. Until a module installed in a managed chassis is configured via the software, it will operate using the hardware configuration.</i>

Unmanaged Modules

Before beginning installation of the IE-iMcV-ModeConverter, configure it for the desired features. The chart states the available features and settings.

After configuring the DIP Switches for the desired settings, install the module and connect the appropriate cables (refer to the *Installation* section for more information).

Switch #	Function	Default
1	ON to Enable LL from SFP1 to SFP2	OFF
2	ON to Enable LL from SFP2 to SFP1	OFF
3	OFF selects High Speed SFP operation ON selects Low speed operation	OFF
4	N/A	OFF

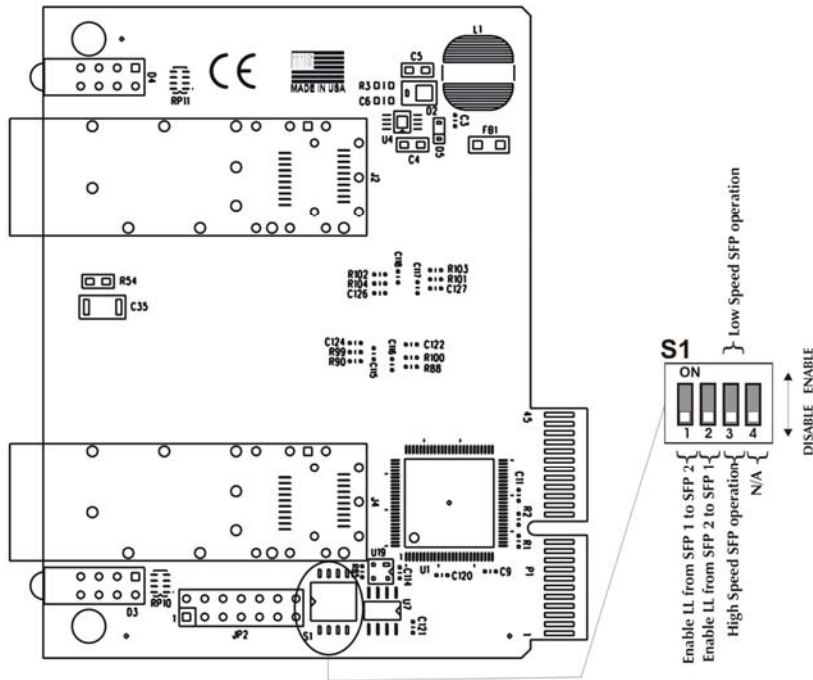

Installation

The IE-iMcV-ModeConverter Modules install in any B&B Electronics SNMP-manageable iMediaChassis series or in any MediaChassis. To install an IE-iMcV-ModeConverter Module, remove the blank bracket covering the slot where the module is to be installed by removing the screws on the outside edges of the bracket. Slide the IE-iMcV-ModeConverter Module into the chassis, via the card guides, until the module is seated securely in the connector. Secure the module to the chassis by tightening the captive screw. Save any blanks removed during installation for future use should configuration requirements change. Install the SFPs necessary for the type of application.

About LinkLoss (FXLL) and SFP Speed

The IE-iMcV-ModeConverter includes LinkLoss (FXLL) and SFP speed control.

The **FXLL** feature is user selectable through management with the default condition OFF. When a loss of signal is detected on an incoming port, the Optical transmitter on the other port is turned OFF. This provides a FXLL carry forward function to alert the IE-iMcV-ModeConverter down stream of the existing problem. The FXLL feature is bi-directional and can be enabled from SFP1-to-SFP2, from SFP2-to-SFP1, or both at the same time. If FXLL is not enabled, a loss of optical signal on one SFP will force a 25 MHz keep alive signal to be transmitted on the other SFP.

The SFP speed DIP Switch allows the end user to select OFF to support high speed SFP operation for 1.25Gbps. Select ON if installing SFPs that support 155Mbps. The Dual Speed function is only supported by Dual Speed SFPs.

NOTE

Both SFP ports must be populated with the same speed capability. Combining a 1.25Gbps SFP with a 155Mbps SFP will not function properly.

LED Operation

Each IE-iMcV-ModeConverter features diagnostic LEDs that provide information on features and ports.

PWR	Power—indicates power is provided to the module Glow green when unit is powered on and running Off when unit is not powered (not operating).
FLT	Fault—indicates a FAULT condition Glow red when SFP is missing Off when there are no alarms/alerts Blinks red if there is an SFP alarm
SD	Signal detect—indicates detection of fiber transmission Glow green when fiber signal is detected Glow red when fiber loss of signal is detected
MSA	Multi-Source Agreement—indicates that an MSA-compliant SFP has been installed Glow green when SFP is detected Off if SFP is not detected
MIS	Mismatch—indicates that two different speeds of SFPs have been installed. The IE-iMcV-ModeConverter will only support SFPs of the same speed. Glow red when there is a speed mismatch Off when speed is OK
FLT	Fault—indicates a FAULT condition Glow red when SFP is missing Off when there are no alarms/alerts Blinks red if there is an SFP alarm
SD	Signal detect—indicates detection of fiber transmission Glow green when fiber signal is detected Glow red when fiber loss of signal is detected
MSA	Multi-Source Agreement—indicates that an MSA-compliant SFP has been installed Glow green when SFP is detected Off if SFP is not detected



Installation Troubleshooting

If the MSA LEDs do not light, check that the same speed has been installed. The MIS LED should indicate this condition.

Specifications

Power Consumption (Typical)

662 mA @ 5V

Operating Temperature

-40°F to +185°F (-40°C to +85°C)

Storage Temperature

-40°F to +185°F (-40°C to +85°C)

Humidity

5 to 95% (non-condensing); 0 to 10,000 ft. altitude

Dimensions

Single Slot iMcV module

B&B Electronics Technical Support

Tel: (800) 346-3119 (in the U.S. and Canada)

Monday-Friday, 7:00am-7:00pm CST

+353 91 792444 (Europe)

Monday through Friday 8:00am - 5:00pm GMT

Fax: (815) 433-5109 U.S. and Canada

+353 91-7924455 Europe

E-Mail: support@bb-elec.com U.S. and Canada

techsupport@bb-elec.com Europe

Web: www.bb-elec.com

Fiber Optic Cleaning Guidelines

Fiber Optic transmitters and receivers are extremely susceptible to contamination by particles of dirt or dust, which can obstruct the optic path and cause performance degradation. Good system performance requires clean optics and connector ferrules.

1. Use fiber patch cords (or connectors, if you terminate your own fiber) only from a reputable supplier; low-quality components can cause many hard-to-diagnose problems in an installation.
2. Dust caps are installed at B&B Electronics to ensure factory-clean optical devices. These protective caps should not be removed until the moment of connecting the fiber cable to the device. Should it be necessary to disconnect the fiber device, reinstall the protective dust caps.
3. Store spare caps in a dust-free environment such as a sealed plastic bag or box so that when reinstalled they do not introduce any contamination to the optics.
4. If you suspect that the optics have been contaminated, alternate between blasting with clean, dry, compressed air and flushing with methanol to remove particles of dirt.

Electrostatic Discharge Precautions

Electrostatic discharge (ESD) can cause damage to any product, add-in modules or stand alone units, containing electronic components. Always observe the following precautions when installing or handling these kinds of products

1. Do not remove unit from its protective packaging until ready to install.
2. Wear an ESD wrist grounding strap before handling any module or component. If the wrist strap is not available, maintain grounded contact with the system unit throughout any procedure requiring ESD protection.
3. Hold the units by the edges; do not touch the electronic components or gold connectors.
4. After removal, always place the boards on a grounded, static-free surface, ESD pad or in a proper ESD bag. Do not slide the modules or stand alone units over any surface.



WARNING! Integrated circuits and fiber optic components are extremely susceptible to electrostatic discharge damage. Do not handle these components directly unless you are a qualified service technician and use tools and techniques that conform to accepted industry practices.

Safety Certifications

CE: The products described herein comply with the Council Directive on Electromagnetic Compatibility (2004/108/EC) For further details, contact B&B Electronics.



Class 1 Laser product, Luokan 1 Laserlaite,
Laser Klasse 1, Appareil A' Laser de Classe 1

European Directive 2002/96/EC (WEEE) requires that any equipment that bears this symbol on product or packaging must not be disposed of with unsorted municipal waste. This symbol indicates that the equipment should be disposed of separately from regular household waste. It is the consumer's responsibility to dispose of this and all equipment so marked through designated collection facilities appointed by government or local authorities. Following these steps through proper disposal and recycling will help prevent potential negative consequences to the environment and human health. For more detailed information about proper disposal, please contact local authorities, waste disposal services, or the point of purchase for this equipment.



International Headquarters

B&B Electronics
707 Dayton Road
Ottawa, IL 61350 USA

Phone (815) 433-5100 — **General Fax** (815) 433-5105

Email: support@bb-elec.com

Website: www.bb-elec.com

European Headquarters

B&B Electronics
Westlink Commercial Park
Oranmore, Co. Galway, Ireland

Phone +353 91-792444 — **Fax** +353 91-792445

Email: techSupport@bb-elec.com

Website: www.bb-elec.com

**ISO 9001:2008
REGISTERED**



© 2013 B&B Electronics. All rights reserved.

The information in this document is subject to change without notice. B&B Electronics assumes no responsibility for any errors that may appear in this document. IE-MiniFiberLinX-II is a trademark of B&B Electronics. Other brands or product names may be trademarks and are the property of their respective companies.

Document Number 50-80500-00 A0

August 2013