


User Manual

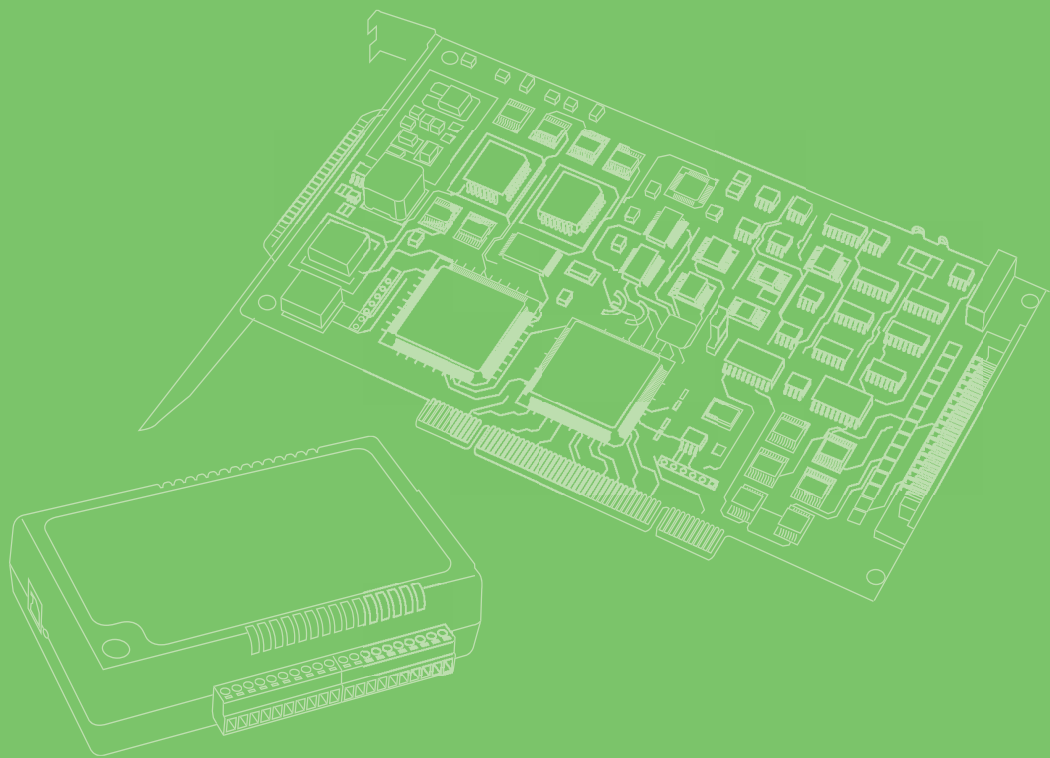

PCI Express COMM Series User Manual

Industrial Serial Communication
Cards

ADVANTECH

Enabling an Intelligent Planet

Copyright

The documentation and the software included with this product are copyrighted 2015 by Advantech Co., Ltd. All rights are reserved. Advantech Co., Ltd. reserves the right to make improvements in the products described in this manual at any time without notice. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written permission of Advantech Co., Ltd. Information provided in this manual is intended to be accurate and reliable. However, Advantech Co., Ltd. assumes no responsibility for its use, nor for any infringements of the rights of third parties, which may result from its use.

Acknowledgements

Intel and Pentium are trademarks of Intel Corporation.

Microsoft Windows and MS-DOS are registered trademarks of Microsoft Corp.

All other product names or trademarks are properties of their respective owners.

Product Warranty (5years)

Advantech warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for five years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Advantech, or which have been subject to misuse, abuse, accident or improper installation. Advantech assumes no liability under the terms of this warranty as a consequence of such events.

Because of Advantech's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If an Advantech product is defective, it will be repaired or replaced at no charge during the warranty period. For out-of-warranty repairs, you will be billed according to the cost of replacement materials, service time and freight. Please consult your dealer for more details.

If you think you have a defective product, follow these steps:

1. Collect all the information about the problem encountered. (For example, CPU speed, Advantech products used, other hardware and software used, etc.) Note anything abnormal and list any onscreen messages you get when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information readily available.
3. If your product is diagnosed as defective, obtain an RMA (return merchandise authorization) number from your dealer. This allows us to process your return more quickly.
4. Carefully pack the defective product, a fully-completed Repair and Replacement Order Card and a photocopy proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

Declaration of Conformity

CE

This product has passed the CE test for environmental specifications when shielded cables are used for external wiring. We recommend the use of shielded cables. This kind of cable is available from Advantech. Please contact your local supplier for ordering information.

CE

This product has passed the CE test for environmental specifications. Test conditions for passing included the equipment being operated within an industrial enclosure. In order to protect the product from being damaged by ESD (Electrostatic Discharge) and EMI leakage, we strongly recommend the use of CE-compliant industrial enclosure products.

FCC Class A

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Technical Support and Assistance

1. Visit the Advantech web site at www.advantech.com/support where you can find the latest information about the product.
2. Contact your distributor, sales representative, or Advantech's customer service center for technical support if you need additional assistance. Please have the following information ready before you call:
 - Product name and serial number
 - Description of your peripheral attachments
 - Description of your software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wording of any error messages

Warnings, Cautions and Notes

Warning! Warnings indicate conditions, which if not observed, can cause personal injury!



Caution! Cautions are included to help you avoid damaging hardware or losing data. e.g.



There is a danger of a new battery exploding if it is incorrectly installed. Do not attempt to recharge, force open, or heat the battery. Replace the battery only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

Note! Notes provide optional additional information.



Document Feedback

To assist us in making improvements to this manual, we would welcome comments and constructive criticism. Please send all such - in writing to: support@advantech.com

Packing List

Before setting up the system, check that the items listed below are included and in good condition. If any item does not accord with the table, please contact your dealer immediately.

- PCIe communication interface board.
- Industrial Communication Driver, Utility and PCIE communication card user's manual in CD-ROM.

Safety Instructions

1. Read these safety instructions carefully.
2. Keep this User Manual for later reference.
3. Disconnect this equipment from any AC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a reliable surface during installation. Dropping it or letting it fall may cause damage.
7. The openings on the enclosure are for air convection. Protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
8. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
9. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
10. All cautions and warnings on the equipment should be noted.
11. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
12. Never pour any liquid into an opening. This may cause fire or electrical shock.
13. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
14. If one of the following situations arises, get the equipment checked by service personnel:
 15. The power cord or plug is damaged.
 16. Liquid has penetrated into the equipment.
 17. The equipment has been exposed to moisture.
 18. The equipment does not work well, or you cannot get it to work according to the user's manual.
 19. The equipment has been dropped and damaged.
 20. The equipment has obvious signs of breakage.
21. **DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE MAY GO BELOW -20° C (-4° F) OR ABOVE 60° C (140° F). THIS COULD DAMAGE THE EQUIPMENT. THE EQUIPMENT SHOULD BE IN A CONTROLLED ENVIRONMENT.**
22. **CAUTION: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER, DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.**
23. The sound pressure level at the operator's position according to IEC 704-1:1982 is no more than 70 dB (A).

DISCLAIMER: This set of instructions is given according to IEC 704-1. Advantech disclaims all responsibility for the accuracy of any statements contained herein.

Safety Precaution - Static Electricity

Follow these simple precautions to protect yourself from harm and the products from damage.

- To avoid electrical shock, always disconnect the power from your PC chassis before you work on it. Don't touch any components on the CPU card or other cards while the PC is on.
- Disconnect power before making any configuration changes. The sudden rush of power as you connect a jumper or install a card may damage sensitive electronic components.

Chapter 1	Introduction.....	1
1.1	Description	2
1.1.1	PCI Express Bus.....	2
1.2	Features	2
1.3	Specifications	3
1.3.1	Bus Interface.....	3
	Table 1.1: Transmission Modes	3
	Table 1.2: Power Consumption	4
1.3.2	Ordering Information	5
	Table 1.3: Model List	5
	Table 1.4: PCIe Communication Cards Selection Guide.....	5
Chapter 2	Hardware Configuration.....	7
2.1	Initial Inspection	8
2.2	Jumper and Switch Locations	9
2.2.1	PCIE-1602B	9
	Figure 2.1 PCIE-1602B Silk Screen	9
2.2.2	PCIE-1602C.....	9
	Figure 2.2 PCIE-1602C Silk Screen	9
2.2.3	PCIE-1612B	10
	Figure 2.3 PCIE-1612B Silk Screen	10
2.2.4	PCIE-1612C.....	10
	Figure 2.4 PCIE-1612C Silk Screen	10
2.2.5	PCIE-1620A/1622A/1622B	11
	Figure 2.5 PCIE-1620A/1622A/1622B Silk Screen.....	11
2.2.6	PCIE-1622C.....	11
	Figure 2.6 PCIE-1622C Silk Screen	11
2.3	Jumper Settings	12
2.3.1	How to Set Jumpers.....	12
	Figure 2.7 How to Set Jumpers	12
2.3.2	Default Settings.....	12
2.3.3	Mode Selection by Jumper/DIP Settings	13
	Figure 2.8 PCIE-1600 Series RS-232/422/485 Selection	13
	Table 2.1: PCIE-1600 Series Operating Mode Jump Position ..	13
	Table 2.2: TX Enable Mode Selection	13
	Figure 2.9 Impedance Selection (for PCIE-1600 Series).....	14
	Table 2.3: PCIE-1600 Series Impedance Selection Jumper Position.....	14
2.4	Card Installation	15
Chapter 3	Driver Setup & Installation.....	17
3.1	Introduction	18
3.2	Driver Setup	18
3.2.1	Steps for Operating System Driver Setup.....	18
3.3	Driver Uninstall.....	21
Appendix 4	ICOM Tools.....	23
4.1	Introduction	24
4.2	Installation	24
4.3	User Interface of ICOM Tools	24
4.3.1	Menu Bar	24
4.3.2	Tool Bar	25
4.3.3	Com Port Tab.....	26

4.3.4	Port Status	26
4.3.5	Message Logo	27
4.3.6	Tx Slide Bar	27
4.3.7	Performance Listing Area	27
4.3.8	Status Bar	28
4.4	Using the ICOM Tools Utility	28
4.4.1	4.4.1 Port Selection	28
	Figure 4.1 ICOM Tools program window	28
	Figure 4.2 Select Port dialog box	28
	Figure 4.3 Ports You Select Will Appear in the Selected Port Checkbox Group	29
	Figure 4.4 Figure 4.4: ICOM Tools User Interface	29
4.4.2	Configuring a Port	30
	Figure 4.5 Test Information on the Performance Listing Area	30
	Figure 4.6 Test Information on the Performance Listing Area	31
4.4.3	Close Port	31
4.4.4	Exit the ICOM Tools utility	31
4.5	Messages on Status Bar and Message Logo Area	31
4.5.1	Status Bar Messages	32
4.5.2	Message Logo Messages	32

Appendix 5 Pin Assignments and Wiring 33

5.1	Pin Assignments	34
5.1.1	PCIE-1602B/C	34
	Table 5.1: PCIE-1602B/CMale DB9 on bracket	34
5.1.2	PCIE-1604B/C	34
	Table 5.2: PCIE-1604B/C Male DB9 on bracket	34
5.1.3	PCle-1610B	35
	Table 5.3: PCIE-1610B Male DB9 on cable	35
	Table 5.4: PCIE-1610B Male DB25 on cable	35
	Table 5.5: PCIE-1610B Female DB37 on bracket	36
5.1.4	PCle-1612B/C	37
	Table 5.6: PCIE-1612B/C Male DB9 on cable	37
	Table 5.7: PCIE-1612B/C Male DB25 on cable	37
	Table 5.8: PCIE-1612B/C Female DB37 on bracket	38
5.1.5	PCIE-1620A and PCIE-1622A/B	39
	Table 5.9: PCIE-1620A, PCIE-1622A/B Female DB62 on bracket 39	
	Table 5.11: PCIE-1620A Male DB9 on cable	40
	Table 5.12: PCIE-1622A/B Male DB25 on cable	40
	Table 5.10: PCIE-1622A/B Male DB9 on cable	40
5.1.6	PCIE-1622C	41
	Table 5.13: PCle-1622C Male DB9 on cable	41
	Table 5.14: PCle-1622C Female DB78 on bracket	42
5.2	Wiring	43
5.2.1	RS-232 Signal Wiring	43
	Table 5.15: Terminal or PC (DTE) Connections	43
	Table 5.16: Modem Connections	43
	Table 5.17: Terminal without Handshake	44
5.2.2	RS-422 Signal Wiring	44
	Table 5.18: RS-422 DB9 Pin Assignment	44
5.2.3	RS-485 Signal Wiring	45
	Figure 5.1 RS-485 Wiring Topology	45

Appendix A Scale of Connectors 47

A.1	Connector Size Comparrison	48
	Figure A.1 DB9 Male	48

Figure A.2 DB25 Male.....	48
Figure A.3 DB37 Female.....	48
Figure A.4 DB62 Female.....	49
Figure A.5 DB78 Female.....	49

Chapter 1

Introduction

1.1 Description

1.1.1 PCI Express Bus

The PCI Express Bus is a high-speed, scalable I/O serial bus technology that is standard designed to replace the PCI bus. Thus, PCI Express has numerous advantages such as higher maximum system bus throughput, less I/O pin, more detailed error detection and reporting mechanism, and smaller physical footprint. Although, at the hardware level PCI slots and PCIe slots are not interchangeable, at the software level PCI Express preserves compatibility with PCI device drivers and OS.

PCI Express is a point-to-point connection, which means it does not share bandwidth but communicates directly with devices via a switch that directs data flow. By adding more lanes, scalable features can be achieved for greater bandwidth.

The PCIe link between PC and other devices can consist of 1 to 32 lanes. These numbers indicate the number of lanes you wish to have. For example, PCIe x16 has 16 lanes.

1.2 Features

PCI Express Card Features

- PCI Express bus 2.0 compliant
- Speeds up to 921.6 kbps for extremely fast data transmission
- Supports any baud rate setting
- 2 x RS-232 or RS- 232/422/485 ports/ XR17V352 UART with 256-byte FIFOs
- 4 x RS-232 or RS- 232/422/485 ports/ XR17V354 UART with 256-byte FIFOs
- 8 x RS-232 or RS- 232/422/485 ports/ XR17V358 UART with 256-byte FIFOs
- Operating systems supported: Windows 2000/XP/Vista/7/8/10, and Linux 2.4/ 2.6/ 3.x.x, QNX 6.5, VxWorks 6.9
- Utility-ICOM Tools

1.3 Specifications

1.3.1 Bus Interface

The following table shows the bus specifications of the comm. cards.

■ Bus interface	■ Models
PCI Express bus specifications 2.0	PCIE-1602B, PCIE-1602C, PCIE-1604B, PCIE-1604C, PCIE-1610B, PCIE-1612B, PCIE-1612C, PCIE-1620A, PCIE-1622A, PCIE-1622B, PCIE-1622C

- **IRQ:** All ports use the same IRQ assigned by PCI/ PCIe Plug-and-Play
- **Data bits:** 5, 6, 7, 8
- **Stop bits:** 1, 1.5, 2
- **Parity:** None, Even, Odd, Mark and Space
- **Speed (bps):**

Model	Criteria	Speed (bps)
PCI Express Series	A level	50~921.6 kbps
	B level	50~921.6 kbps

- **Data Signals:**

Table 1.1: Transmission Modes

BUS Interface	Model name	Ports	Communication Interface		
			RS-232	RS-422	RS-485
PCI Express	PCIE-1602B	2	V	V	V
	PCIE-1602C	2	V	V	V
	PCIE-1604B	2	V		
	PCIE-1604C	2	V		
	PCIE-1610B	4	V		
	PCIE-1612B	4	V	V	V
	PCIE-1612C	4	V	V	V
	PCIE-1620A	8	V		
	PCIE-1622A	8	V	V	V
	PCIE-1622B	8	V	V	V
	PCIE-1622C	8	V	V	V

1. RS-232: TxD, RxD, RTS, CTS, DTR, DSR, DCD, RI
2. RS-422: Tx+, Tx-, Rx+, Rx-, CTS+, CTS-, RTS+, RTS-
3. RS-485: Data+, Data-

- **Dimensions**

Size	Model
119.63 x 111 mm (4.71" x 4.4")	PCIE-1602B, PCIE-1602C, PCIE-1604B, PCIE-1604C
168 x 111 mm (6.6" x 4.4")	PCIE-1610B, PCIE-1612B, PCIE-1612C, PCIE-1620A, PCIE-1622A, PCIE-1622B, PCIE-1622C

- **Power Consumption**

Table 1.2: Power Consumption

Model name	Typical	Max
PCIE-1602B	260 mA @ +3.3 V	330mA @3.3V
PCIE-1602C	260 mA @ +3.3 V	450mA @3.3V
PCIE-1604B	260 mA @ +3.3 V	330mA @3.3V
PCIE-1604C	260 mA @ +3.3 V	450mA @3.3V
PCIE-1610B	260 mA @ +3.3 V	530mA @3.3V
PCIE-1612B	260 mA @ +3.3 V	530mA @3.3V
PCIE-1612C	260 mA @ +3.3 V	680mA @3.3V
PCIE-1620A	260 mA @ +3.3 V	880 mA @ 3.3 V
PCIE-1622A	260 mA @ +3.3 V	880 mA @ 3.3 V
PCIE-1622B	260 mA @ +3.3 V	880 mA @ 3.3 V
PCIE-1622C	260 mA @ +3.3 V	1250mA @3.3V

- **Operating Temperature:** -10 ~ 60°C (14 ~ 144°F)
- **Operating Humidity:** 5 ~ 95% Relative Humidity, non-condensing
- **Storage Temperature:** -25 ~ 85°C (-13~185°F)
- **Current Value:** 20mA (Standard)
- **Mode:**
RS-232/422: Asynchronous, full duplex
RS-485: Asynchronous, half duplex
- **Baud-rate:** 50 ~ 921.6 kbps
- **Transmission Distance:**
RS-232<15m
RS-422/485 <1000m

1.3.2 Ordering Information

Table 1.3: Model List

Product	Description
PCIE-1602B	2-port RS-232/422/485 PCIe Comm. Card w/ Surge Protection
PCIE-1602C	2-port RS-232/422/485 PCIe Comm. Card w/ Surge & Isolation Protection
PCIE-1604B	2-port RS-232 PCIe Comm. Card w/ Surge Protection
PCIE-1604C	2-port RS-232 PCIe Comm. Card w/ Surge & Isolation Protection
PCIE-1610B	4-port RS-232 PCIe Comm. Card w/ Surge Protection w/ Surge Protection
PCIE-1612B	4-port RS-232/422/485 PCIe Comm. Card w/ Surge Protection
PCIE-1612C	4-port RS-232/422/485 PCIe Comm. Card w/ Surge & Isolation Protection
PCIE-1620A	8-port RS-232 PCIe Comm. Card
PCIE-1622A	8-port RS-232/422/485 PCIe Comm. Card
PCIE-1622B	8-port RS-232/422/485 PCIe Comm. Card w/ Surge Protection
PCIE-1622C	8-port RS-232/422/485 PCIe Comm. Card w/ Surge & Isolation Protection

Table 1.4: PCIe Communication Cards Selection Guide

Model	Ports	Comm. Interface Support	Protection	
			Surge	Isolation
PCIE-1602	B	RS-232/422/485	1000 V	3000 V _{DC}
	C			
PCIE-1604	B	RS-232	1000 V	3000 V _{DC}
	C	RS-232	1000 V	
PCIE-1610	B	RS-232	1000 V	
PCIE-1612	B	RS-232/422/485	1000 V	3000 V _{DC}
	C	RS-232/422/485	1000 V	
PCIE-1620	A	RS-232		
PCIE-1622	A	RS-232/422/485		
	B	RS-232/422/485	1000 V	
	C	RS-232/422/485	1000 V	3000 V _{DC}

1.3.2.1 Accessories

- **OPT4A-AE:** 30cm Male DB-37 to 4xMale DB9 Cable
- **OPT8C-AE:** 1M Male DB-62 to 8xMale DB-25 Cable
- **OPT8H-AE:** 1M Male DB-62 to 8xMale DB-9 Cable
- **OPT8J-AE:** 1M Male DB-78 to 8xMale DB-9 Cable
- **OPT8HP:** 1M double shield DB-62 to 8XDB-9 Cable
- **OPT8AP-AE:** 8 port RS-232(DCE) ConnectionBox W/(F)DB25 CONN.

Chapter 2

Hardware
Configuration

2.1 Initial Inspection

1. PCI/ PCI Express Communication card
2. ICOM CD-ROM including:
 - a. User manual
 - b. Industrial Communication Driver
 - c. Utility tool

We carefully inspect our PCI/ PCI Express communication card mechanically and electrically before shipping. It should be free of marks and scratches and in perfect working condition on receipt.

As you unpack, check for any signs of shipping damage (damaged box, scratches, dents, etc.). Should any damage is found or fails to meet specifications, please notify our service department or your local sales representative immediately. Also the carrier should be notified. Retain the shipping carton and packing material for further inspections by the carrier.

After inspection we will make arrangements to repair or replace the unit.

When you handle the communication card, remove it from its protective packaging by holding the rear metal panel. Keep the anti-vibration packaging for further storage, as the card was removed from the PC.

Warning! *Discharge your body's static electric charge by touching the back of the grounded chassis of the system unit (metal) before handling the board. You should avoid contact with materials that hold a static charge such as plastic, vinyl and styrofoam. Handle the board only by its edges to avoid static damage to its integrated circuits. Avoid touching the exposed circuit connectors. We also recommend that you use a grounded wrist strap and place the card on a static dissipative mat whenever you work with it.*



2.2 Jumper and Switch Locations

2.2.1 PCIE-1602B

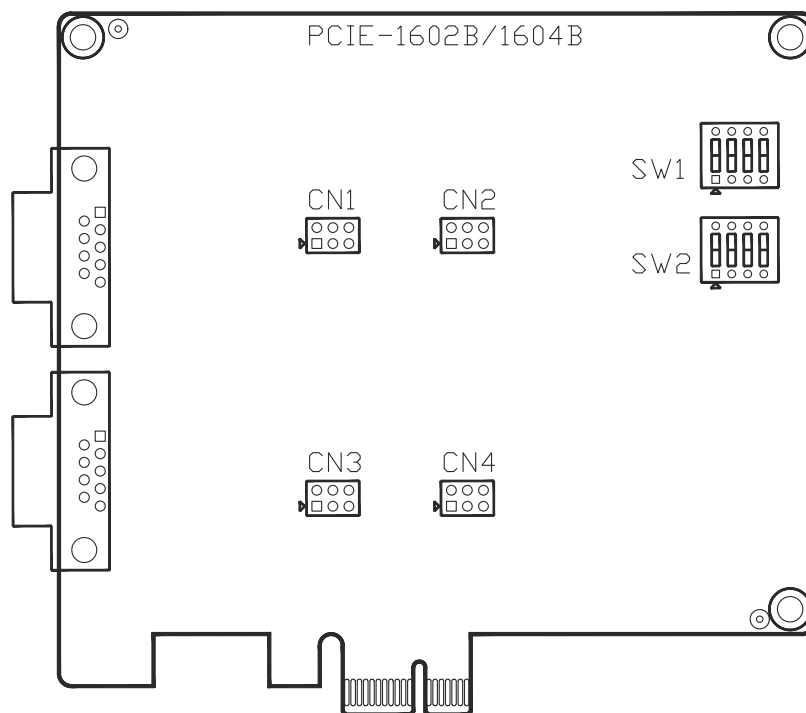


Figure 2.1 PCIE-1602B Silk Screen

2.2.2 PCIE-1602C

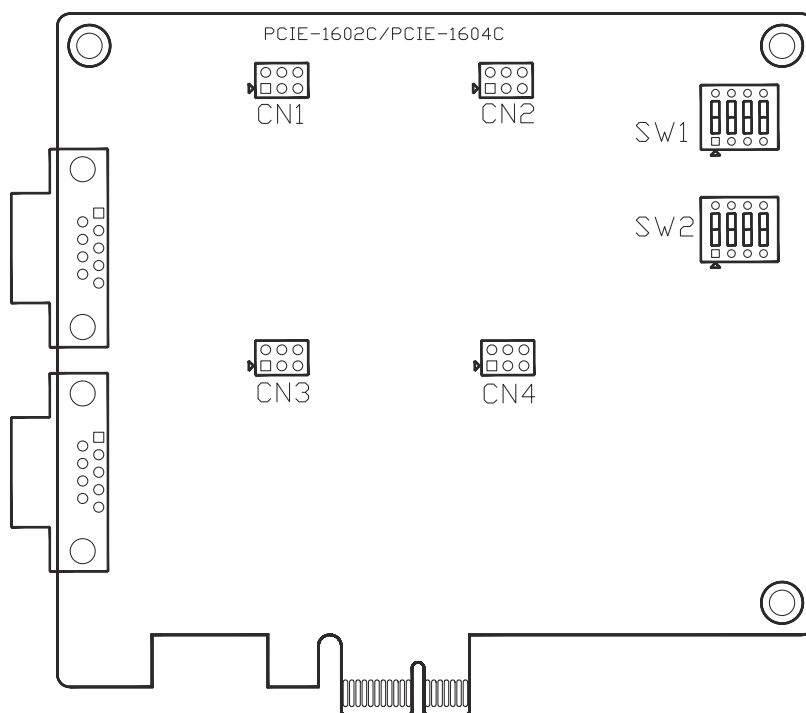


Figure 2.2 PCIE-1602C Silk Screen

2.2.3 PCIE-1612B

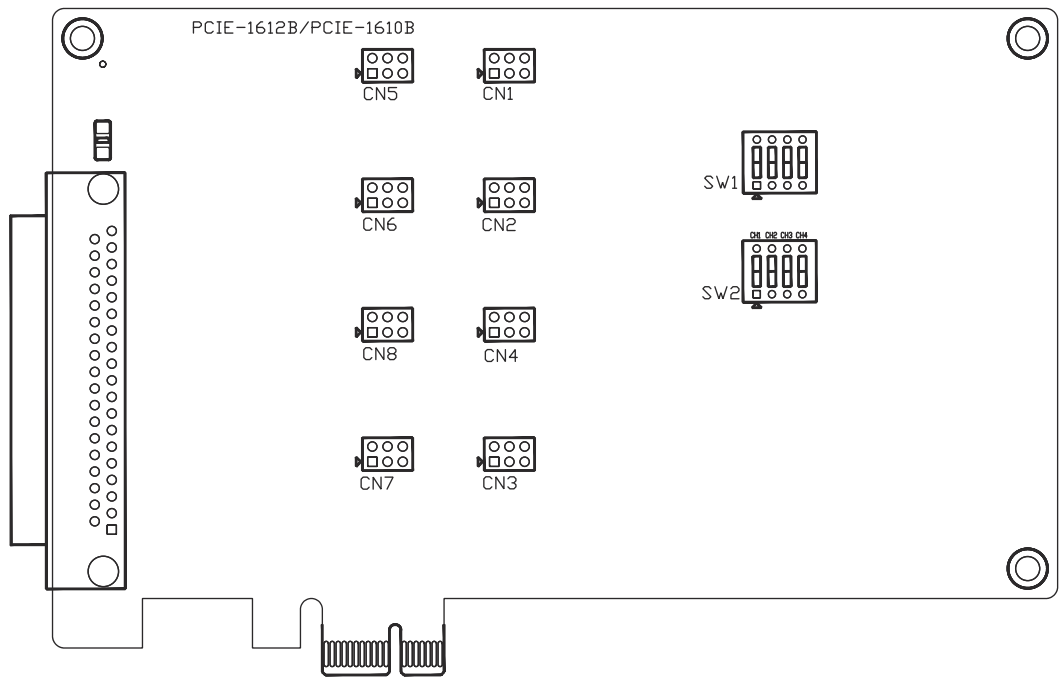


Figure 2.3 PCIE-1612B Silk Screen

2.2.4 PCIE-1612C

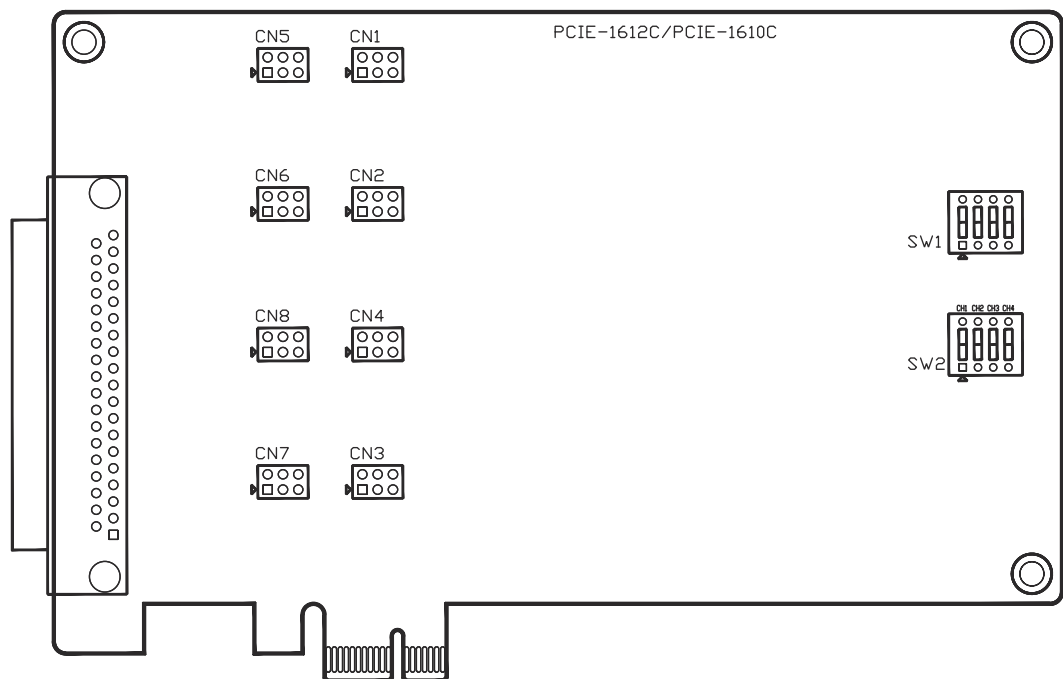


Figure 2.4 PCIE-1612C Silk Screen

2.2.5 PCIE-1620A/1622A/1622B

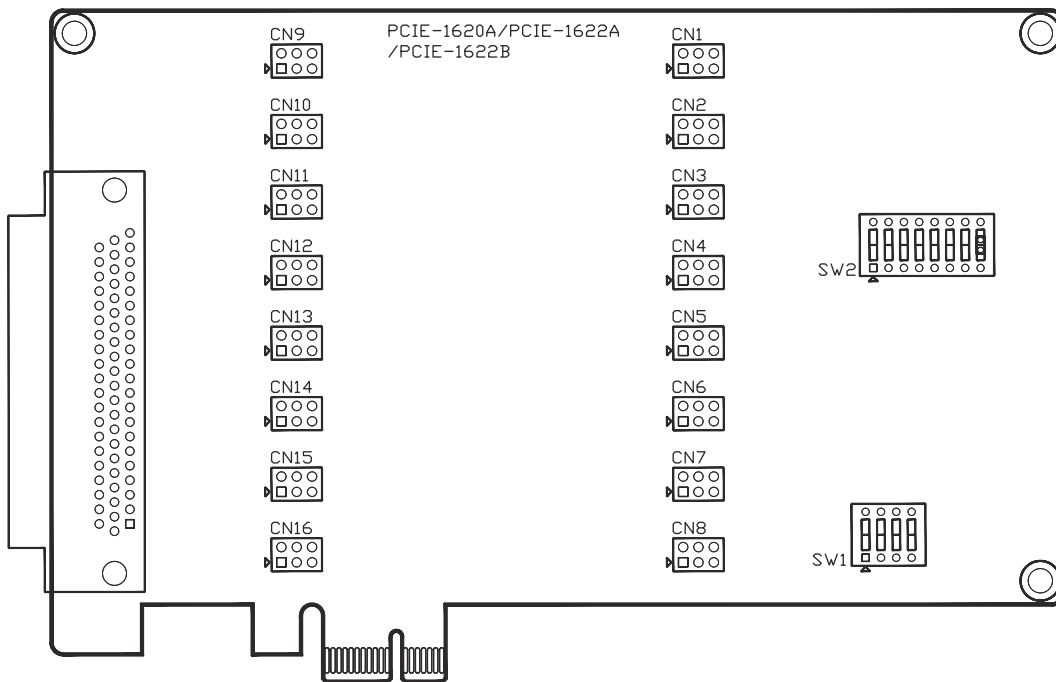


Figure 2.5 PCIE-1620A/1622A/1622B Silk Screen

2.2.6 PCIE-1622C

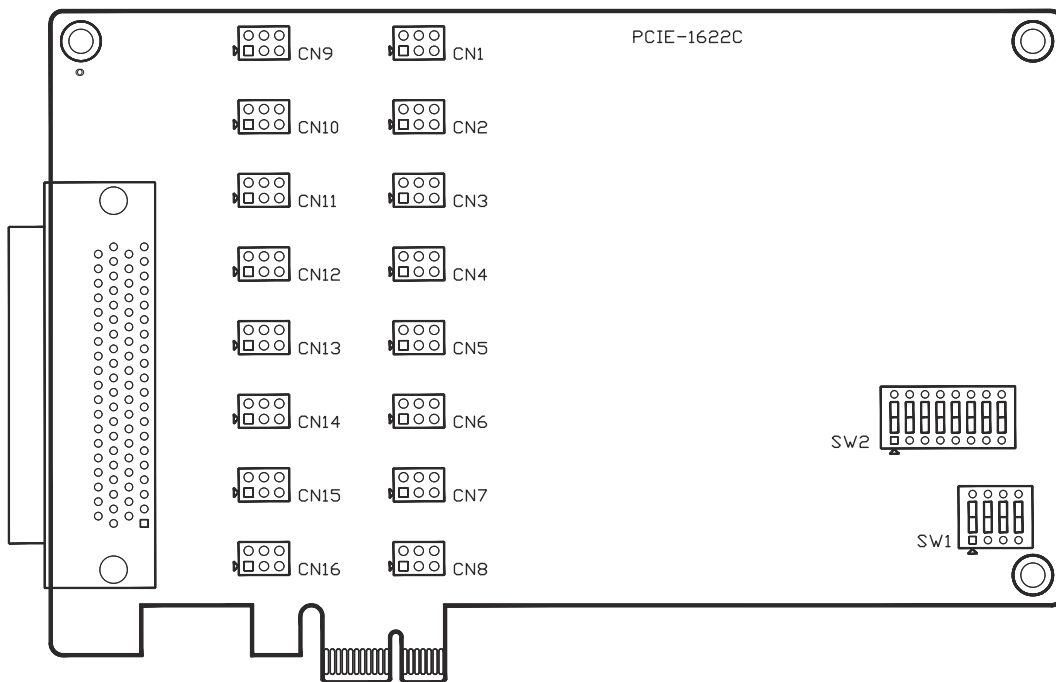


Figure 2.6 PCIE-1622C Silk Screen

2.3 Jumper Settings


This section shows how to set the jumpers to configure your card. It gives the card default configuration and your options for each jumper.

2.3.1 How to Set Jumpers

Configure the card to match the needs of your application by setting jumpers. A jumper is the simplest kind of electric switch. It consists of two metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To “close” a jumper, connect the pins with the clip. To “open” a jumper, remove the clip.

You may find a pair of needle-nose pliers useful for setting the jumpers.

If you have any doubts about the best hardware configuration for your application, contact your local distributor or sales representative before making any changes.

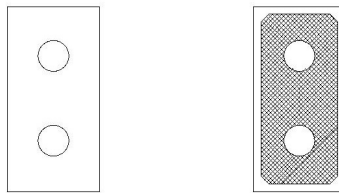

Open

Closed

Figure 2.7 How to Set Jumpers

2.3.2 Default Settings

The card is shipped with default settings. If you need to change these settings, however, refer to the following sections.

PCIe-1600 Series Communication card Settings

Model	Specifications	Default Setting	TX Enable Mode	Remarks
PCIe-1602B/ 1602C	RS-232/422/485	RS-232	Auto	
PCIe-1604B/1604C	RS-232	RS-232	N/A	* means jumpers will be provided for terminator use and packed in PE bag along with the card inbox.
PCIe-1610B	RS-232	RS-232	N/A	
PCIe-1612B/1612C	RS-232/422/485	RS-232	Auto	
PCIe-1620A	RS-232	RS-232	N/A	
PCIe-1622A/1622B/1622C	RS-232/422/485	RS-232	Auto	

2.3.3 Mode Selection by Jumper/DIP Settings

2.3.3.1 RS-232/422/485 Selection ((for PCIE-1602B/1602C/1612B/1612C/1622A/1622B/1622C)

Should you wish to configure the PCIE communication card to operate in the RS-232 or RS422/RS-485 mode, you will locate jumpers at CN10 to CN17 to make connection as shown below.

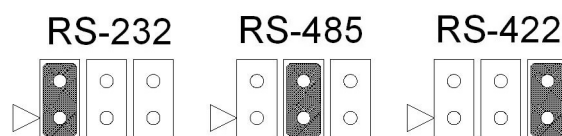


Figure 2.8 PCIE-1600 Series RS-232/422/485 Selection

Table 2.1: PCIE-1600 Series Operating Mode Jump Position

Model	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
PCIE-1602B	CN1	CN3						
PCIE-1602C	CN1	CN3						
PCIE-1612B	CN1	CN2	CN3	CN4				
PCIE-1612C	CN1	CN2	CN3	CN4				
PCIE-1622A	CN10	CN11	CN12	CN13	CN14	CN15	CN16	CN17
PCIE-1622B	CN10	CN11	CN12	CN13	CN14	CN15	CN16	CN17
PCIE-1622C	CN1	CN2	CN3	CN4	CN5	CN6	CN7	CN8

2.3.3.2 TX Enable mode selection

TX Enable mode is set by two, four or eight position DIP switches(SW2), one for each port.

If a switch is set to “On”, the driver of the corresponding port is always enabled, master mode of RS-422 application. If a switch is set to “OFF”, the driver is in auto direction control mode. The user must select a mode before beginning RS-422 applications.

Table 2.2: TX Enable Mode Selection

Mode	Switch Position	Description
RS-422_Master	ON	TX always enabled
RS-422_Slave/RS-485	OFF	Enabled auto direction control.

2.3.3.3 Termination setup (for PCIE-1602B/1602C/1612B/1612C/1622A/1622B/1622C)

You can set termination resistors if necessary to match impedance. Each signal line (Tx, Rx) has a separate resistor.

Note! *Especially in fields with serious electric noise, setting termination resistors is helpful to stabilize communications. Make sure that both sides of the RS-485 bus have termination resistors. See details in Chapter 5.2.2 and 5.2.3.*



Termination is recommended for use when designing a RS-422 interface.

RS422 mode with terminator resistor is 120ohm on standard condition. But the transmission condition is impacted by the impedance of cable length.

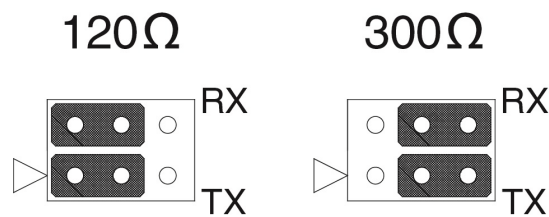



Figure 2.9 Impedance Selection (for PCIE-1600 Series)

Table 2.3: PCIE-1600 Series Impedance Selection Jumper Position

Model	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
PCIE-1602B	CN2	CN4						
PCIE-1602C	CN2	CN4						
PCIE-1612B	CN5	CN6	CN7	CN8				
PCIE-1612C	CN5	CN6	CN7	CN8				
PCIE-1622A	CN2	CN3	CN4	CN5	CN6	CN7	CN8	CN9
PCIE-1622B	CN2	CN3	CN4	CN5	CN6	CN7	CN8	CN9
PCIE-1622C	CN9	CN10	CN11	CN12	CN13	CN14	CN15	CN16

2.4 Card Installation

Note!  We strongly recommend that you install the software driver before you install the hardware into your system, since this will guarantee a smooth and trouble-free installation process.

Turn off your PC's power supply whenever you install or remove the PCI/PCIe communication card or its cables. Static electricity can easily damage computer equipment. Ground yourself by touching the chassis of the computer (metal) before you touch any boards. See the static warning on Ch.2

1. Install the driver; see chapter 3.1 and chapter 3.2.
2. Turn off the computer and all peripheral devices (such as printers and monitors).
3. Disconnect the power cord and any other cables from the back of the computer.
4. Remove the PC's cover (refer to your user's guide if necessary).
5. Install and plug the *PCIe* communication card on your *PCIe* BUS.
6. Replace the PC's cover. Connect the cables you removed in step 3.
7. Turn the computer power on.
8. Driver will install *PCIe* Communication card automatically, see chapter 3.3 and 3.4 and 3.5.
9. Test your COM port and verify if COM port could work normally, see chapter 4.
10. Refer to the pin assignment and cabling for further information, see chapter 5.

Chapter 3

Driver Setup &
Installation

3.1 Introduction

This chapter describes the driver installation, configuration, and removal procedures for Windows operating system. We strongly recommend installing the software driver before the hardware, since this will guarantee a smooth and trouble-free installation process.


3.2 Driver Setup

Windows operating system supports COM1 to COM256, meaning up to 256 serial ports. In order to fully utilize the advanced features of Windows operating system such as multiprocessing and multithreading, pure 32-bit Windows 2K/XP/Vista/7 and others, as afore indicated, device drivers are provided for the PCI/PCIe communication cards. All these drivers conform to the Win32 COMM API standard.

3.2.1 Steps for Operating System Driver Setup

Follow the steps below for the PCI/PCIe communication cards' windows operating system driver installation.

1. Insert your companion DVD-ROM disc into your DVD-ROM drive.
2. The driver setup program will be launched automatically. If the auto-play function is not enabled on your system, use Windows Explorer or the Windows Run command to execute autorun.exe on the companion DVD-ROM.

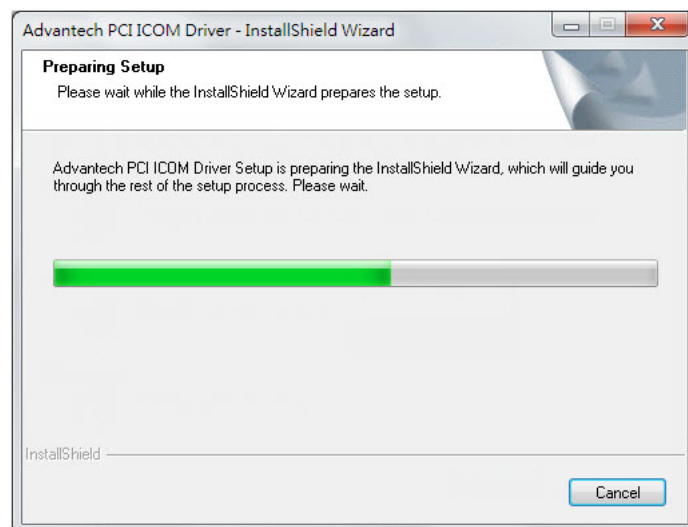



3. After the setup program is launched, you'll see the following Screen.



4. Click the Continue button and the catalogue select page appears. Then click the **Installation** button for installation.




5. Choose the driver you want to install, then click the hyperlink.

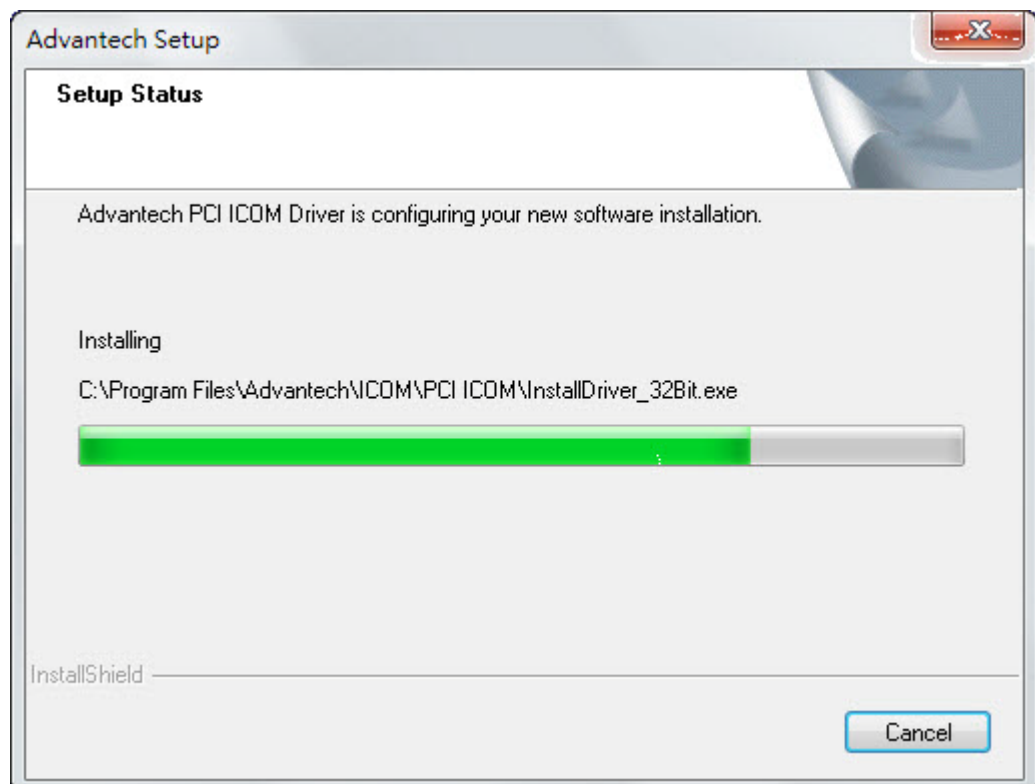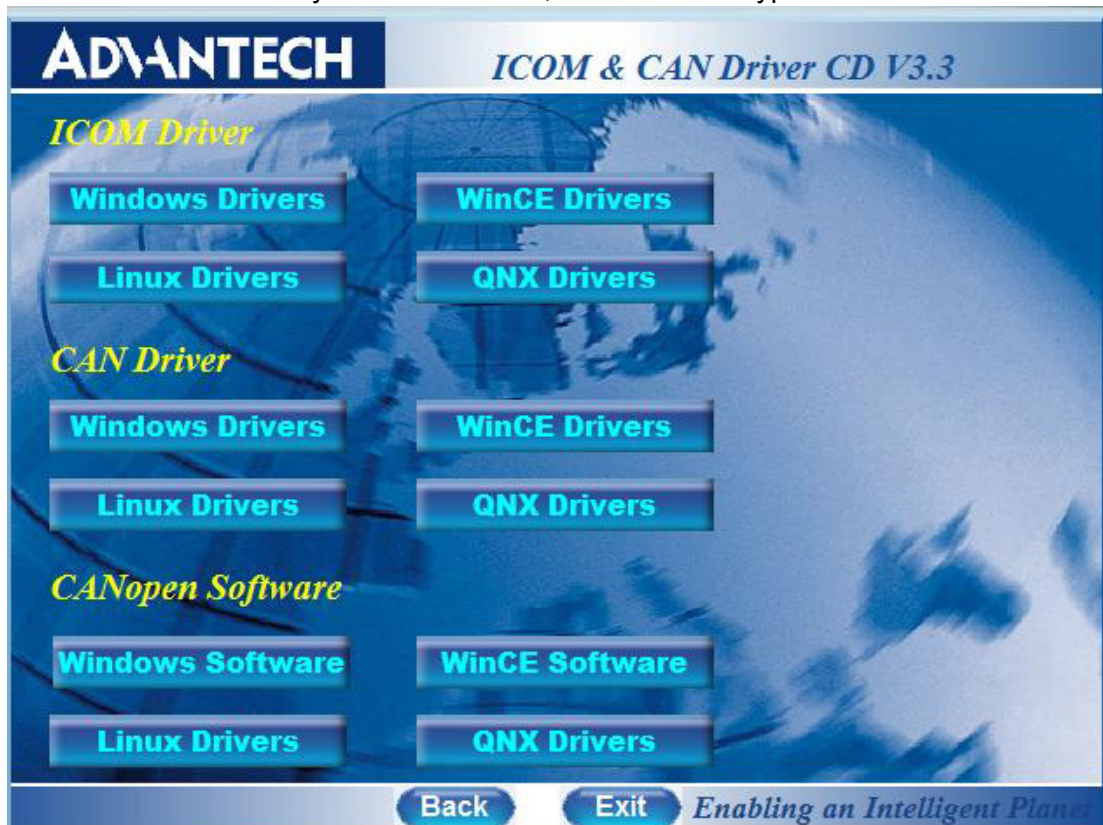


3.3 Driver Uninstall

1. Insert the ICOM DVD and click the driver you want to uninstall.

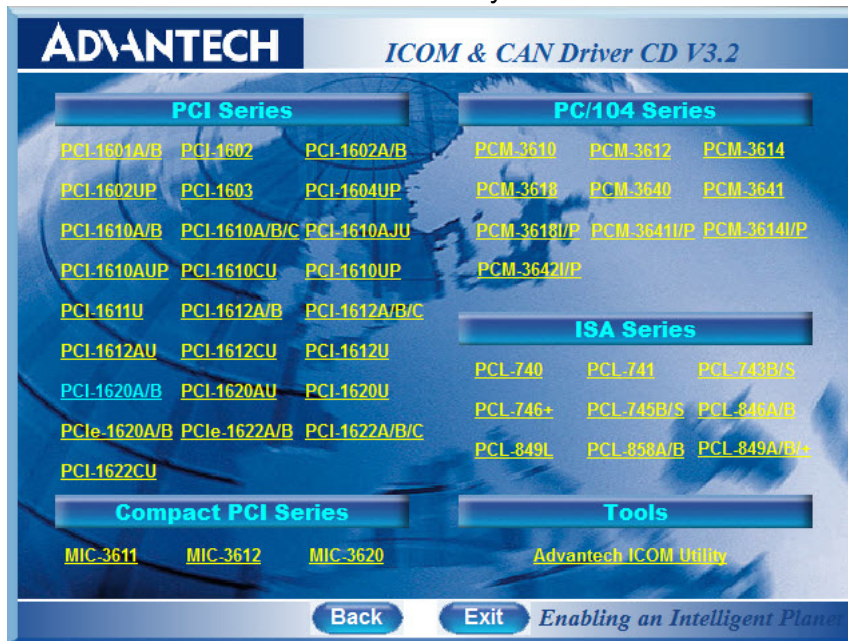

2. Choose “**Modify**” radio button if you want to save another driver. Or choose “**Remove**” radio button to remove all installed components.

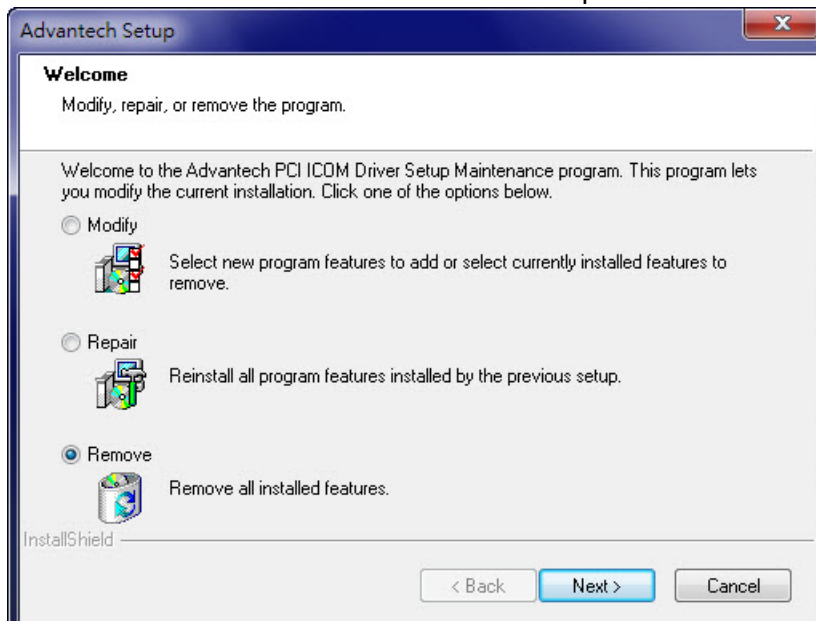

Chapter 4

ICOM Tools

4.1 Introduction

Advantech ICOM Tools is a convenient utility that has been designed to help you test the performance of ICOM cards through analyzing the port status. It features an easy to use graphical user interface that will soon make you familiar with testing via menu commands and toolbar buttons.

Advantech ICOM Tools is applicable to all series of Advantech ICOM cards, and can even be used with other third-party ICOM cards. It is included for free on the diskette or on the companion DVD-ROM with all Advantech Industrial Communication cards.

4.2 Installation

To begin installation, double-click the ICOM_Tools.exe program icon in the Tools folder or click the Advantech ICOM Utility hyperlink in the installation window to launch the ICOM Tools setup program. The setup program will copy the program files to the destination folder you choose or to the default installation path (i.e. C:\Program Files\Advantech\ICOM Tools). A program folder will be created in your Start/Programs menu. (Later you can just access the program through Start/Program/Advantech PCI Comm Tools/COM Examine Tool)


4.3 User Interface of ICOM Tools

4.3.1 Menu Bar

Port All Ports Help

On the Menu Bar you can select various menu commands to perform port-testing functions. You can also use the short-cut keys.

Port Submenu



Select: Select the ports you want to configure

Setup: Setup the configuration of a specific port

Close: Close a specific port

Run: Run the test on a specific port

Stop: Stop the test on a specific port

All Ports Submenu



Setup: Setup the configurations of all ports

Run: Run the test on all ports

Stop: Stop the test on all ports

Help Submenu Access Online help

4.3.2 Tool Bar




Using the Tool Bar buttons is a more intuitive way to implement the functions of ICOM Tools.

	Port Select: Selects the port(s) you want to perform testing on
	Port Setup: Sets up configuration of the port you have selected
	Port Close: Closes the port you have selected
	Port Run: Runs the port test on the port you have selected
	Port Stop: Stops the port test on the port you have selected
	All Ports Setup: Sets up the configuration of all ports not running test
	All Ports Run: Runs test on all ports
	All Ports Stop: Stops test on all ports
	Clear Message: Clears messages on Message Logo area and the Rx length information on the Performance Listing area

4.3.3 Com Port Tab

Each Com Port tab represents a specific port you have selected for test and configuration. On the tab, you can see the Transfer Mode, Port Status, and Message Logo area.

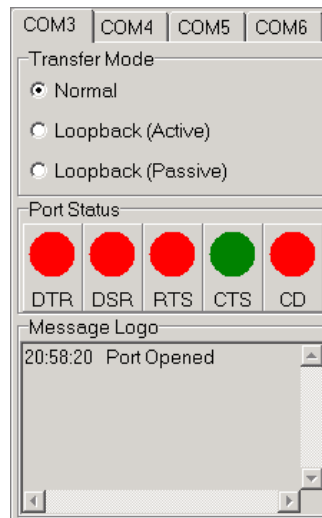


Transfer Modes

You can specify the transfer mode to be Normal, loopback (active) or loopback (passive).

Normal—allows data to be transmitted and received simultaneously. The data reception rate is helpful in identifying the performance of a communication card installed on your system.

Loopback- In loopback mode a series of special data will be transmitted, which are expected to appear on the receiving end. Using the loopback mode, you can check the integrity of received data and find whether any error occurred on the transmission line. The active loopback and passive loopback must work in pair to enable the loopback mode. When a port operates as active loopback mode, it will send data first and receive data later. Another port, which operates as passive loopback, will retransmit any received data on the Rx line and then send these data onto the Tx line. These two modes will form a logical loop and help to verify the integrity of data transmitted over the communication link.

4.3.4 Port Status

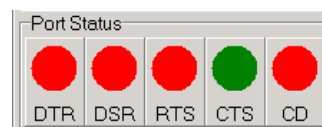

DTR (data-terminal-ready)

DSR (data-set-ready)

RTS (request-to-send)

CTS (clear-to-send)


CD (carrier-detect)

For RS-232 specifications, DTR and RTS are for output signals and can be toggled on and off by double-clicking the labels (such as DTR, DSR, RTS, CTS, CD) under the red/green marks. However, if you are using RTS/CTS for flow control to run the test, you will see the RTS mark appear in black. This indicates that the RTS can no longer be toggled on/ off since it is controlled by driver itself.



A black mark represents that the function is controlled by the driver itself and therefore not controllable by software.

4.3.5 Message Logo

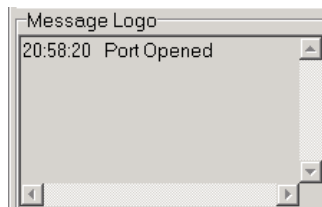

On the Message Logo area, you can see the relevant messages about the port(s) you have selected.

For information about specific messages in this area, please refer to Section 4.5, Messages on the Status Bar and Message Logo area.

4.3.6 Tx Slide Bar

The Tx Slide Bar allows you to control the overall system loading. You can adjust the transmission rate of your port(s) from 0% to 100%. Just drag the slide button along the track to adjust the transmission rate.




4.3.7 Performance Listing Area

On the performance listing area, you can see the relevant information, such as Rx Length (received packet byte length), Bytes/Sec (transmission rate) and Last Abnormal Status of each port running a test.

Performance			
Port	Rx Length	(Bytes/Sec)	Last Abnormal Status

4.3.8 Status Bar



The Status Bar is where you can glimpse the current information of the port you have selected. The Status Bar indicates whether the port is READY, RUNNING, BUSY or STOPPED, N/A PORT and the configuration information such as baud rate, data bit, stop bit, parity bit and flow control (represented as 1200 N 8 1 None) settings. Also we can see the duration of the test in hh:mm:ss format on the right.

For information about specific messages on this area, please refer to Section 4.5, Messages on the Status Bar and Message Logo area.

4.4 4.4 Using the ICOM Tools Utility

To launch the ICOM Tools testing utility, access Start/Programs/Advantech PCI Comm Tools/COM Examine Tools to start the port testing utility.

4.4.1 4.4.1 Port Selection

Follow the steps below to make your port selection:

1. Launch ICOM Tools. You will first see the Program Window such as Figure 4.1. Since you haven't selected any port for testing yet, all you can see now is a blank window area.



Figure 4.1 ICOM Tools program window

2. Select the port(s) you want to test by the Port/Select menu command or by clicking the Port Select button on the Toolbar, and a dialog box such as Fig. 2 will appear.

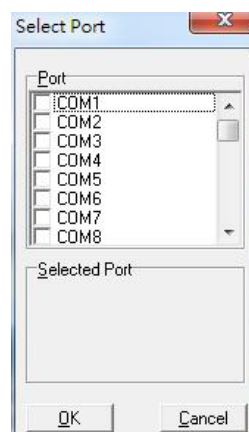


Figure 4.2 Select Port dialog box

Select the port(s) you want to perform test on from the checkboxes next to each COM port. You can either click the checkbox or double-click the name(s) of the port(s) to select/deselect port(s) to perform the test on. The port(s) you selected will immediately appear in the Selected Port field.

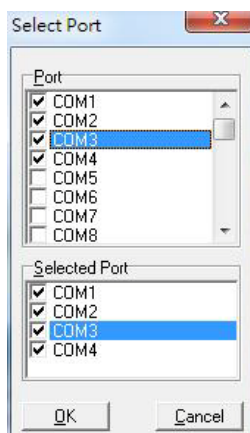


Figure 4.3 Ports You Select Will Appear in the Selected Port Checkbox Group
Click OK to bring up the ICOM Tools User Interface such as below:

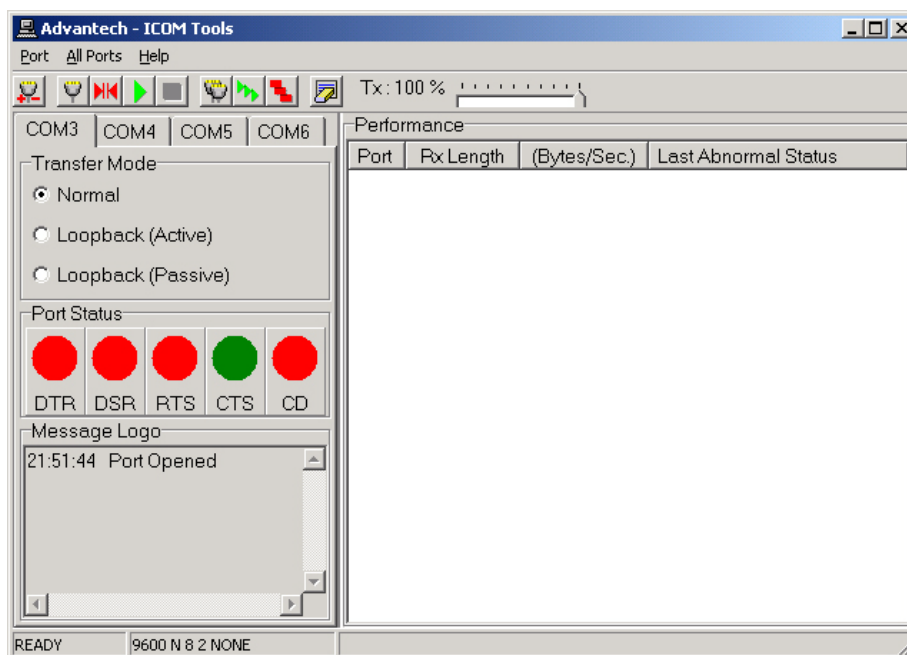




Figure 4.4 Figure 4.4: ICOM Tools User Interface

4.4.2 Configuring a Port

You can choose to configure a specific port (or to configure all ports) before running your test. Just click a Com Port Tab to select the port you want to configure, and then click the **Port Setup**  button or use the **Port/Setup** menu command (or if you want to configure all ports at once, just click the **All Ports Setup**  button or access the All Ports/Setup menu command) to bring up the Configure Port dialog box such as below.

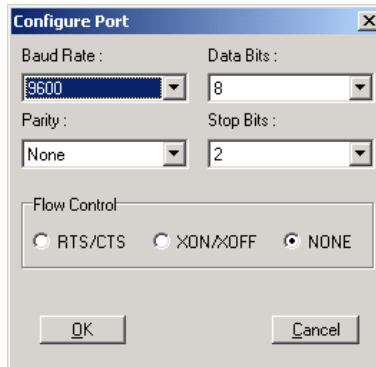



Figure 4.5 Test Information on the Performance Listing Area

In the **Configure Port** dialog box, you can configure the Baud Rate, Data bits, Parity, Stop Bits and the flow control mode for that specific port (or for all ports). After you have configured all the settings you want to change, click **OK** to make this configuration active.



Note!



*When using **All Ports Setup** button or **All Ports/ Setup**  menu command to configure settings for all ports, you must take care to stop any ports*

that are running test in order to configure them. If you do not stop the test running on a specific port, it won't be configured at all. That is, you get to configure only the ports that have been stopped.

Run the Test

After you have completed the configuration of the port(s), you can now start the test on the port you have selected by clicking the **Run**  button or accessing the **Port/Run** menu command (or you want to run all ports at once, just click the **All Ports Run**  button or access **All Ports/Run** menu command).

Once the test is started, you can see relevant test information of port performance on the **performance listing area**.

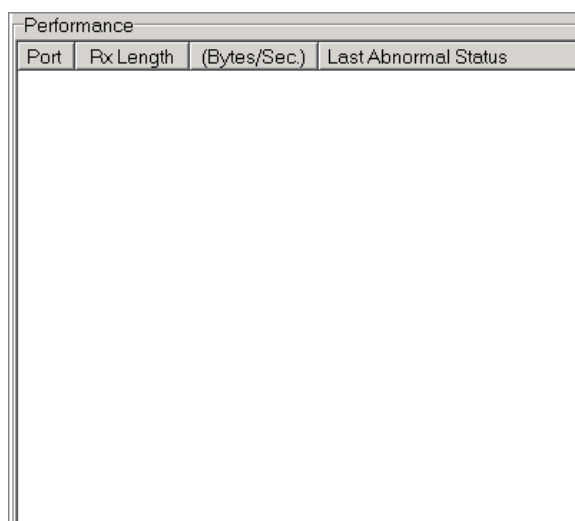






Figure 4.6 Test Information on the Performance Listing Area

The Performance Listing Area

Port	The com port number
Rx length	Received packet length in bytes
Bytes/Sec	Transmission rate in Bytes/Sec
Last Abnormal Status	Last abnormal status

Stop the Test

If you want to stop the test on a specific port, just click **Port Stop**  button or access **Port/Stop** menu command (or if you want to stop test on all ports, just click **All Ports Stop**  button or access All Ports/Stop menu command).

You can restart the test by clicking the **Run**  button or accessing the Port/Run menu command (or if you want to run all ports at once, just click the **All Ports Run**  button or access All Ports/Run menu command).

4.4.3 Close Port

If you want to close a port, just select the **Com Port** tab and click **Port Close** button or access **Port/Close** menu command to close the port.

4.4.4 Exit the ICOM Tools utility

To exit the ICOM Tools utility, simply access Port/Exit menu command or click the Close button on the upper right corner of the program window.

4.5 Messages on Status Bar and Message Logo Area

Messages appearing on the Status Bar and Message Logo area are helpful in understanding specific information of your system settings and performance.

4.5.1 Status Bar Messages

BUSY: the port is currently used by another application.

FAIL: the configuration parameters are not accepted by the port

N/A PORT: the port is not available in the system

READY: the port is ready to run or to be configured.

RUNNING: the test is running on the port

STOPPED: the test running on the port has been stopped by the user

4.5.2 Message Logo Messages

Port Opened: The user has opened the port

Port Setup Fail: The user has set up the port configuration with parameters that are either incorrect or unsupported.

Port Running: The port is running a test

Port Stopped: The test is stopped on the port

Tx Starting/Tx Stopped: Transmitting starting/transmitting stop

Rx Starting/Rx Stopped: Receiving starting/receiving stop

Break Error: A break event has been detected on the port

Framing Error: A timing error (i.e. from start bit to stop bit) has been detected on the port

Port I/O Error: An incorrect I/O event has been detected on the port

Rx Overrun: Received data has been overwritten before being processed

Rx Buffer Full Error: The buffer on the receiving end is saturated so that newly arrived data are ignored

Tx Buffer Full Error: The buffer on the transmitting end is saturated so that the data transmitted by applications are ignored.

LB Error - %d: Data error is detected in loop back

LB Rx Pending: Loop back mode is waiting for incoming data

Data Setup Error: Parameter error in port configuration

Chapter 5

Pin Assignments and Wiring


5.1 Pin Assignments

5.1.1 PCIE-1602B/C

The following table and figure shows the pin assignments of two male DB9 connectors on the bracket for PCIE-1602B/ PCIE-1602C in RS-232, RS-422 and RS-485 modes.

Table 5.1: PCIE-1602B/C Male DB9 on bracket

Pin	RS-232	RS-422	RS-485
1	DCD	Tx-	Data-
2	RxD	Tx+	Data+
3	TxD	Rx+	N/A
4	DTR	Rx-	N/A
5	GND	GND	GND
6	DSR	RTS-	N/A
7	RTS	RTS+	N/A
8	CTS	CTS+	N/A
9	RI	CTS-	N/A

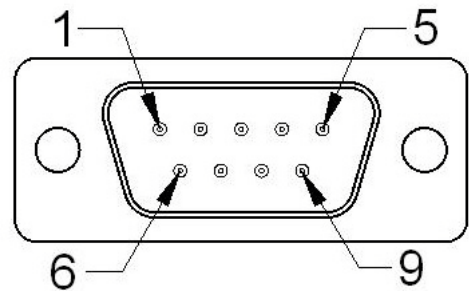


5.1.2 PCIE-1604B/C

The following table and figure shows the pin assignments of two male DB9 connectors on the bracket for PCIE-1604B and PCIE-1604C.

Table 5.2: PCIE-1604B/C Male DB9 on bracket

Pin	RS-232
1	DCD
2	RxD
3	TxD
4	DTR
5	GND
6	DSR
7	RTS
8	CTS
9	RI

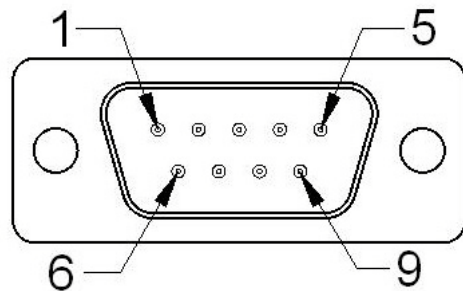


5.1.3 PCIe-1610B

The following tables and figures show the pin assignments of 1 female DB37 connector on the bracket to male DB9/DB25 for PCIe-1610B cards.

Table 5.3: PCIe-1610B Male DB9 on cable


Pin	RS-232
1	DCD
2	RxD
3	TxD
4	DTR
5	GND
6	DSR
7	RTS
8	CTS
9	RI

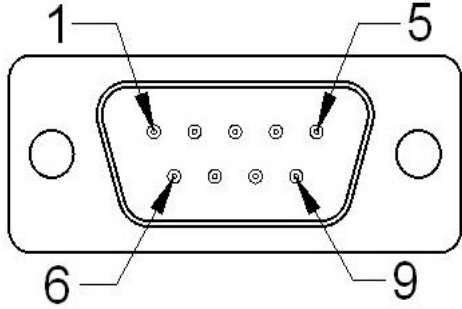

The diagram shows a top-down view of a male DB9 connector. It has a central row of five pins and a bottom row of four pins. The pins are numbered as follows: 1 (top-left), 5 (top-right), 6 (bottom-left), and 9 (bottom-right). There are two circular mounting holes on either side of the connector housing.

Table 5.4: PCIe-1610B Male DB25 on cable


Pin	RS-232
2	TxD
3	RxD
4	RTS
5	CTS
6	DSR
7	GND
8	DCD
20	DTR
22	RI

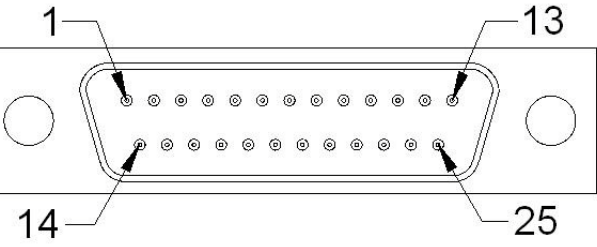

The diagram shows a top-down view of a male DB25 connector. It has two rows of pins: a top row of 13 pins and a bottom row of 12 pins. The pins are numbered as follows: 1 (top-left), 13 (top-right), 14 (bottom-left), and 25 (bottom-right). There are two circular mounting holes on either side of the connector housing.

Table 5.5: PCIE-1610B Female DB37 on bracket


Pin	RS-232	Pin	RS-232
1	-	20	3_RI
2	3_DCD	21	3_DTR
3	3_GND	22	3_DSR
4	3_CTS	23	3_RTS
5	3_RxD	24	3_TxD
6	4_RI	25	4_DCD
7	4_DTR	26	4_GND
8	4_DSR	27	4_CTS
9	4_RTS	28	4_RxD
10	4_TxD		
		29	2_RI
11	2_DCD	30	2_DTR
12	2_GND	31	2_DSR
13	2_CTS	32	2_RTS
14	2_RxD	33	2_TxD
15	1_RI	34	1_DCD
16	1_DTR	35	1_GND
17	1_DSR	36	1_CTS
18	1_RTS	37	1_RxD
19	1_TxD		

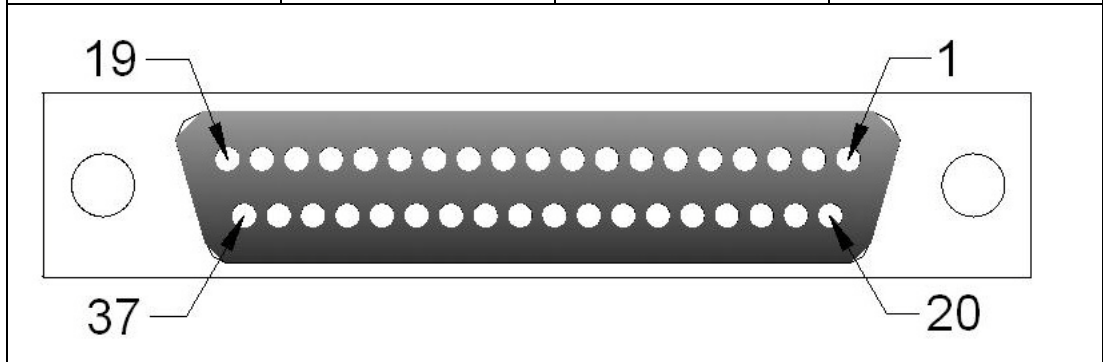

5.1.4 PCIe-1612B/C


The following tables and figures show the pin assignments of 1 female DB37 connector on the bracket to male DB9/DB26 for the PCIe-1612B/C cards in RS-232, RS-422 and RS-485 modes.

Table 5.6: PCIe-1612B/C Male DB9 on cable			
Pin	RS-232	RS-422	RS-485
1	DCD	Tx-	Data-
2	RxD	Tx+	Data+
3	TxD	Rx+	-
4	DTR	Rx-	-
5	GND	GND	GND
6	DSR	RTS-	-
7	RTS	RTS+	-
8	CTS	CTS+	-
9	RI	CTS-	-

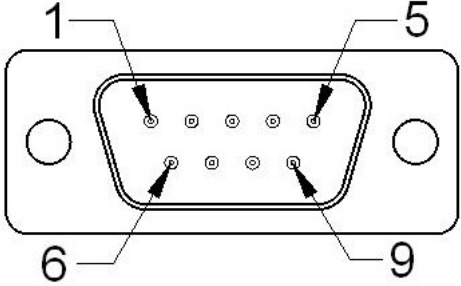

The diagram shows a top-down view of a male DB9 connector. It has a rectangular metal housing with a central 9-pin D-sub connector. Four pins are specifically labeled with arrows: pin 1 (top-left), pin 5 (top-right), pin 6 (bottom-left), and pin 9 (bottom-right). There are also two circular mounting holes on the sides of the housing.


Table 5.7: PCIe-1612B/C Male DB25 on cable					
Pin	RS-232	Pin	RS-232	Pin	RS-232
1	1_TxD	16	1_CTS	31	1_DCD
2	1_RxD	17	1_DTR	32	1_RI
3	1_RTS	18	1_DSR	33	1_GND
4	-	19	-	34	-
5	1_TxD	20	2_CTS	35	2_DCD
6	2_RxD	21	2_DTR	36	2_RI
7	2_RTS	22	2_DSR	37	2_GND
8	-	23	-	38	-
9	3_TxD	24	3_CTS	39	3_DCD
10	3_RxD	25	3_DTR	40	3_RI
11	3_RTS	26	3_DSR	41	3_GND
12	-	27	-		
13	4_TxD	28	4_CTS	42	4_DCD
14	4_RxD	29	4_DTR	43	4_RI
15	4_RTS	30	4_DSR	44	4_GND

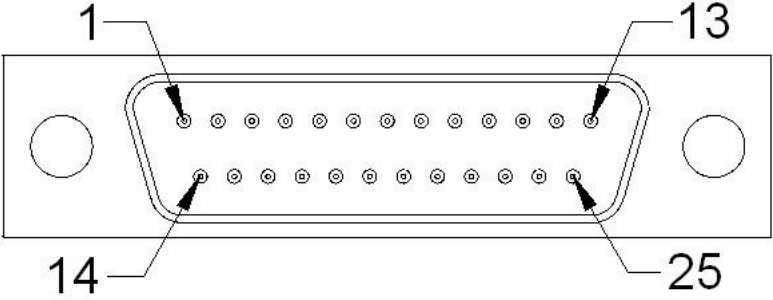

The diagram shows a top-down view of a male DB25 connector. It has a rectangular metal housing with a central 25-pin D-sub connector. Four pins are specifically labeled with arrows: pin 1 (top-left), pin 13 (top-right), pin 14 (bottom-left), and pin 25 (bottom-right). There are also two circular mounting holes on the sides of the housing.

Table 5.8: PCIe-1612B/C Female DB37 on bracket

Pin	RS-232	RS-422	RS-485	Pin	RS-232	RS-422	RS-485
1	-	-	-	20	3_RI	3_CTS-	-
2	3_DCD	3_TxD-	3_Data-	21	3_DTR	3_RxD-	-
3	3_GND	3_GND	3_GND	22	3_DSR	3_RTS-	-
4	3_CTS	3_CTS+	-	23	3_RTS	3_RTS+	-
5	3_RxD	3_TxD+	3_Data+	24	3_TxD	3_RxD+	-
6	4_RI	4_CTS-	-	25	4_DCD	4_TxD-	4_Data-
7	4_DTR	4_RxD	-	26	4_GND	4_GND	4_GND
8	4_DSR	4_RTS-	-	27	4_CTS	4_CTS+	-
9	4_RTS	4_RTS+	-	28	4_RxD	4_TxD+	4_Data+
10	4_TxD	4_RxD+	-				
				29	2_RI	2_CTS-	-
11	2_DCD	2_TxD-	2_Data-	30	2_DTR	2_RxD-	-
12	2_GND	2_GND	2_GND	31	2_DSR	2_RTS	-
13	2_CTS	2_CTS+		32	2_RTS	2_RTS+	-
14	2_RxD	2_TxD+	2_Data+	33	2_TxD	2_RxD+	-
15	1_RI	1_CTS-	-	34	1_DCD	1_TxD-	1_Data-
16	1_DTR	1_RxD	-	35	1_GND	1_GND	1_GND
17	1_DSR	1_RTS-	-	36	1_CTS	1_CTS+	-
18	1_RTS	1_RTS+	-	37	1_RxD	1_TxD+	1_Data+
19	1_TxD	1_RxD+	+				

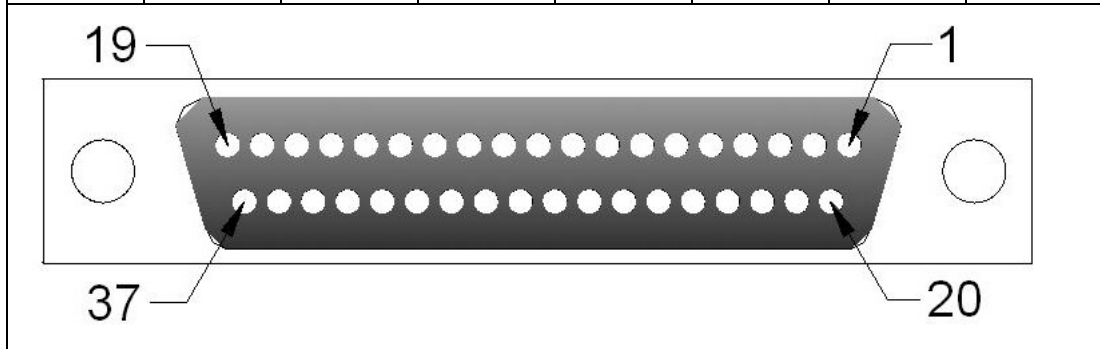

5.1.5 PCIE-1620A and PCIE-1622A/B

The following tables and figures show the pin assignments of 1 female DB62 connector on the bracket to DB9 for the PCIE-1620A and PCIE-1622A/B cards.

Table 5.9: PCIE-1620A, PCIE-1622A/B Female DB62 on bracket

Pin	RS-232	RS-422	RS-485	Pin	RS-232	RS-422	RS-485
1	1_TX	1_RX+	-	32	GND	GND	GND
2	1_DTR	1_RX-	-	33	5_TX	5_RX+	-
3	2_RX	2_TX+	2_Data+	34	5_DTR	5_RX-	-
4	2_DSR	-	-	35	6_RX	6_TX+	6_Data+
5	2_DCD	2_TX-	2_Data-	36	6_DSR	-	-
6	3_TX	3_RX+	-	37	6_DCD	6_TX-	6_Data-
7	3_DTR	3_RX	-	38	7_TX	7_RX+	-
8	4_RX	4_TX+	4_Data+	39	7_DTR	7_RX-	-
9	4_DSR	-	-	40	GND	GND	GND
10	4_DCD	4_TX-	4_Data-	41	8_TX	8_RX+	-
11	5_RX	5_TX+	5_Data+	42	8_DTR	8_RX-	-
12	5_DSR	-	-	43	1_CTS	-	-
13	5_DCD	5_TX-	5_Data-	44	1_RTS	-	-
14	6_TX	6_RX+	-	45	GND	GND	GND
15	6_DTR	6_RX-	-	46	2_CTS	-	-
16	7_RX	7_TX+	7_Data+	47	2_RTS	-	-
17	7_DSR	-	-	48	3_CTS	-	-
18	7_DCD	7_TX-	7_Data-	49	3_RTS	-	-
19	8_RX	8_TX+	8_Data+	50	GND	GND	GND
20	8_DSR	-	-	51	4_CTS	-	-
21	8_DCD	8_TX-	8_Data-	52	4_RTS	-	-
22	1_RX	1_TX-	1_Data+	53	5_CTS	-	-
23	1_DSR	-	-	54	5_RTS	-	-
24	1_DCD	1_TX-	1_Data-	55	GND	GND	GND
25	2_TX	2_RX+	-	56	6_CTS	-	-
26	2_DTR	2_RX-	-	57	6_RTS	-	-
27	3_RX	3_TX+	3_Data+	58	GND	GND	GND
28	3_DSR	-	-	59	7_CTS	-	-
29	3_DCD	3_TX-	3_Data-	60	7_RTS	-	-
30	4_TX	4_RX+	-	61	8_CTS	-	-
31	4_DTR	4_RX-	-	62	8_RTS	-	-

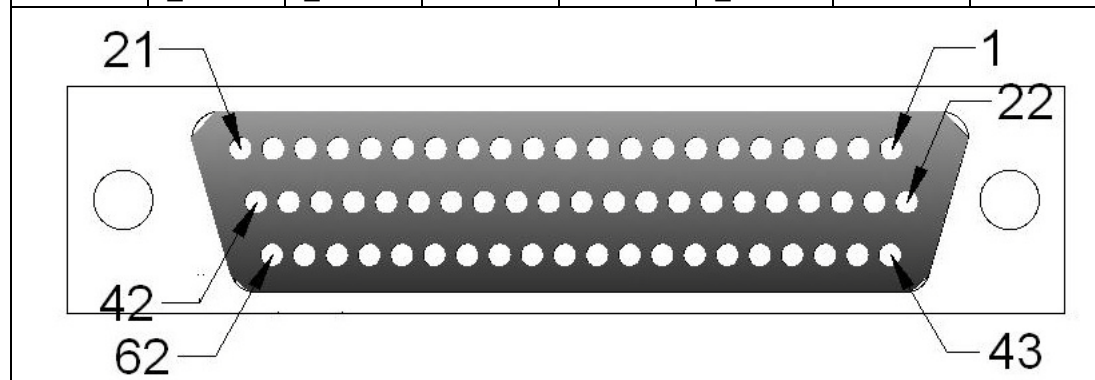


Table 5.10: PCIE-1622A/B Male DB9 on cable

Pin	RS-232	RS-422	RS-485
1	DCD	TX-	Data-
2	RxD	TX+	Data+
3	TxD	RX+	-
4	DTR	RX-	-
5	GND	GND	GND
6	DSR	-	-
7	RTS	-	-
8	CTS	-	-

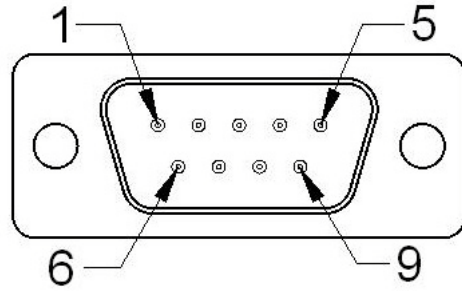


Table 5.11: PCIE-1620A Male DB9 on cable

Pin	RS-232
1	DCD
2	RxD
3	TxD
4	DTR
5	GND
6	DSR
7	RTS
8	CTS
9	RI


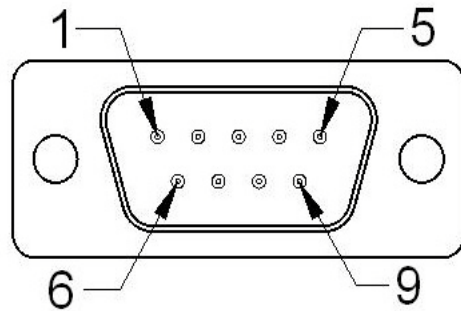


Table 5.12: PCIE-1622A/B Male DB25 on cable

Pin	RS-232	RS-422	RS-485
1	DCD	TX-	Data-
2	RxD	TX+	Data+
3	TxD	RX+	-
4	DTR	RX-	-
5	GND	GND	GND
6	DSR	-	-
7	RTS	-	-
8	CTS	-	-
20	DTR	-	-

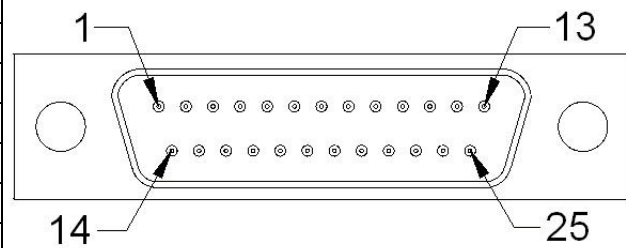

5.1.6 PCIE-1622C

The following table and figure show the pin assignments of 1 female DB78 connector on the bracket to DB9 for the PCIE-1622C card in RS-232, RS-422 and RS-485 modes.

Table 5.13: PCIE-1622C Male DB9 on cable

Pin	RS-232	RS-422	RS-485
1	DCD	Tx-	Data-
2	RxD	Tx+	Data+
3	TxD	Rx+	N/A
4	DTR	Rx-	N/A
5	GND	GND	GND
6	DSR	RTS-	N/A
7	RTS	RTS+	N/A
8	CTS	CTS+	N/A
9	RI	CTS-	N/A


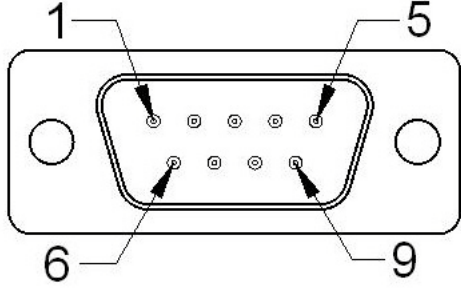


Table 5.14: PCIe-1622C Female DB78 on bracket

Pin	RS-232	RS-422	RS-485	Pin	RS-232	RS-422	RS-485
1	8_GND	8_GND	8_GND	40	8_DCD	8_TxD-	8_Data-
2	8_DSR	8_RTS-	-	41	8_RxD	8_TxD+	8_Data+
3	8_RTS	8_RTS+	-	42	7_GND	7_GND	7_GND
4	7_DSR	7_RTS-	-	43	7_DCD	7_TxD-	7_Data-
5	7_RTS	7_RTS+	-	44	7_RxD	7_TxD+	7_Data+
6	6_DSR	6_RTS-	-	45	6_DCD	6_TxD-	6_Data-
7	6_RTS	6_RTS+	-	46	6_RxD	6_TxD+	6_Data+
8	-	-	-	47	5_GND	5_GND	5_GND
9	5_DSR	5_RTS-	-	48	5_DCD	5_TxD-	5_Data-
10	5_RTS	5_RTS+	-	49	5_RxD	5_TxD+	5_Data+
11	4_DSR	4_RTS-	-	50	4_DCD	4_TxD-	4_Data-
12	4_RTS	4_RTS+	-	51	4_RxD	4_TxD+	4_Data+
13	-	-	-	52	3_GND	3_GND	3_GND
14	3_DSR	3_RTS-	-	53	3_DCD	3_TxD-	3_Data-
15	3_RTS	3_RTS+	-	54	3_RxD	3_TxD+	3_Data+
16	2_DSR	2_RTS-	-	55	2_DCD	2_TxD-	2_Data-
17	2_RTS	2_RTS+	-	56	2_RxD	2_TxD+	2_Data+
18	-	-	-	57	1_GND	1_GND	1_GND
19	1_DSR	1_RTS-	-	58	1_DCD	1_TxD-	1_Data-
20	1_RTS	1_RTS+	-	59	1_RxD	1_TxD+	1_Data+
21	8_CTS	8_CTS+	-	60	8_TxD	8_RxD+	-
22	8_RI	8_CTS-	-	61	8_DTR	8_RxD-	-
23	7_CTS	7_CTS+	-	62	7_TxD	7_RxD+	-
24	7_RI	7_CTS-	-	63	7_DTR	7_RxD-	-
25	-	-	-	64	6_GND	6_GND	6_GND
26	6_CTS	6_CTS+	-	65	6_TxD	6_RxD+	-
27	6_RI	6_CTS-	-	66	6_DTR	6_RxD-	-
28	5_CTS	5_CTS+	-	67	5_TxD	5_RxD+	-
29	5_RI	5_CTS-	-	68	5_DTR	5_RxD-	-
30	-	-	-	69	4_GND	4_GND	4_GND
31	4_CTS	4_CTS+	-	70	4_TxD	4_RxD+	-
32	4_RI	4_CTS-	-	71	4_DTR	4_RxD-	-
33	3_CTS	3_CTS+	-	72	3_TxD	3_RxD+	-
34	3_RI	3_CTS-	-	73	3_DTR	3_RxD-	-
35	-	-	-	74	2_GND	2_GND	2_GND
36	2_CTS	2_CTS+	-	75	2_TxD	2_RxD+	-
37	2_RI	2_CTS-	-	76	2_DTR	2_RxD-	-
38	1_CTS	1_CTS+	-	77	1_TxD	1_RxD+	-
39	1_RI	1_CTS-	-	78	1_DTR	1_RxD-	-

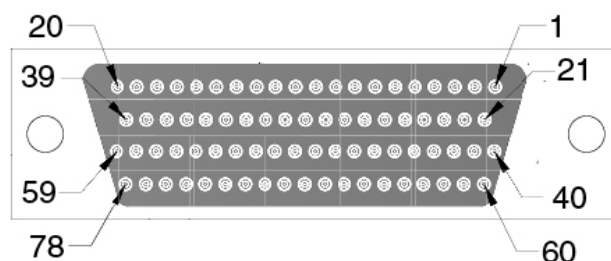

5.2 Wiring

5.2.1 RS-232 Signal Wiring

Since the RS-232 interface is not strictly defined, many devices have their own connection methods which may ignore some signal lines or reserved lines for other functions. It is best to refer to the user's manual of your device for installation instructions. You may find the following helpful.

In general, DTE (Data Terminal Equipment) refers to the device that is leading the communication. Examples include PC's, terminals and some printers. DCE refers to the device being communicated with or controlled. Examples include modems, DSU's (digital service units), printers and lab/factory equipment.

In some situations you may be able to get by with just three lines: data on TXD, a signal ground and a handshaking line. Examples are printer or plotter connections, troubleshooting and situations where you require only one-wire communication.

Table 5.15: Terminal or PC (DTE) Connections			
DB-25 Male		DB-25 Male or Female: Terminal	
Pin	Signal	Pin	Signal
2	TxD	3	RxD
3	RxD	2	TxD
4	RTS	5	CTS
5	CTS	4	RTS
6	DSR	20	DTR
7	GND	7	GND
20	DTR	6	DSR
8	DCD	8	DCD

Table 5.16: Modem Connections			
DB-25 Male		Modem (DCE)	
Pin	Signal	Pin	Signal
2	TxD	3	RxD
3	RxD	2	TxD
4	RTS	5	CTS
5	CTS	4	RTS
6	DSR	20	DTR
7	GND	7	GND
20	DTR	6	DSR
8	DCD	8	DCD

For DTE to DCE connections, use a straight through cable (i.e., you don't have to reverse lines 2 and 3, lines 4 and 5, and lines 6 and 20 since, in general, the DCE RS-232 interfaces are reversed themselves).

Table 5.17: Terminal without Handshake

DB-25 Male		Terminal, PC (DTE)	
Pin	Signal	Pin	Signal
2	TxD	3	RxD
3	RxD	2	TxD
4	RTS		
5	CTS		
7	GND	7	GND
6	DSR		
20	DTR		
8	DCD		

Therefore, if you are not using CTS, RTS, DSR, DTR and DCD signals, short pins 4 and 5 together, and please short pins 6, 8, and 20 together.

5.2.2 RS-422 Signal Wiring

The RS-422 interface wiring is based on one-on-one principles. The transmit lines on one side connect to the receive lines on the other side, and vice versa. With RS-422, you can transmit and receive data simultaneously (full duplex). The connections are as follows:

Table 5.18: RS-422 DB9 Pin Assignment

DTE (Male DB-9)		Terminal DTE	
Pin	Signal	Pin	Signal
1	TxD-	1	RxD-
2	TxD+	2	RxD+
3	RxD+	3	TxD+
4	RxD-	4	TxD-
5	GND	5	GND
6	RTS-	6	CTS-
7	RTS+	7	CTS+
8	CTS+	8	CTS+

Termination Resistors Setup

Termination resistors are on-board and can be selected by jumper for 120 or 300 Ohms. Each pair of signal lines has a separate resistor (RxD+/-, TxD+/-).

5.2.3 RS-485 Signal Wiring

The RS-485 standard supports half-duplex communication. This means that just two wires are needed to both transmit and receive data. Handshaking signals (such as RTS, Request To Send) are normally used to control the direction of the data flow and to switch the transmission accordingly. In RS-485 mode, the PCIe-1602/1612/1622 cards automatically sense the direction of the data flow and switch the transmission direction — no handshaking is necessary. This means a user can build an RS-485 network with just two wires. This RS-485 control is completely transparent to the user. The software written for half duplex RS-485 works without any modification.

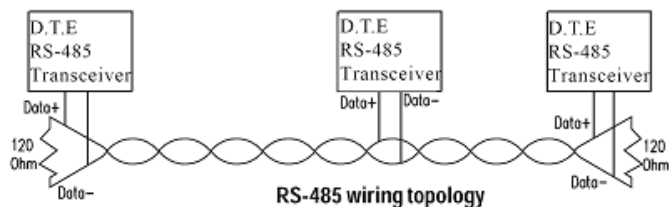


Figure 5.1 RS-485 Wiring Topology

Termination Resistor Setup

Termination resistors are on-board and can be selected by jumper for 120 or 300 Ohms.

Appendix **A**

Scale of Connectors

A.1 Connector Size Comparison

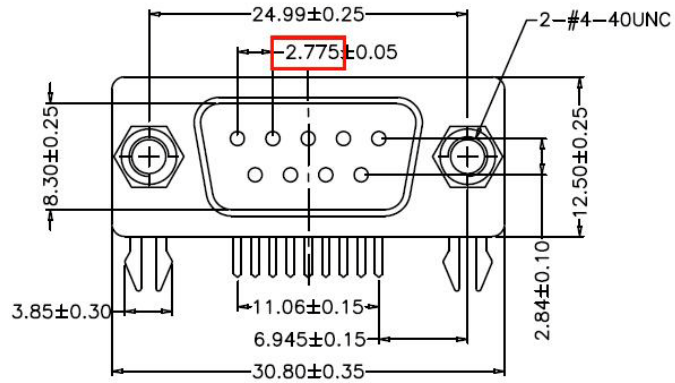


Figure A.1 DB9 Male

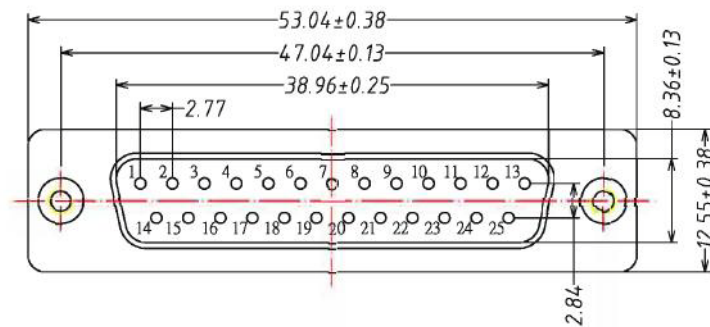


Figure A.2 DB25 Male

POSITION	A±0.20	B±0.20	C±0.38	D
37 PIN	54.80	63.50	69.40	49.86

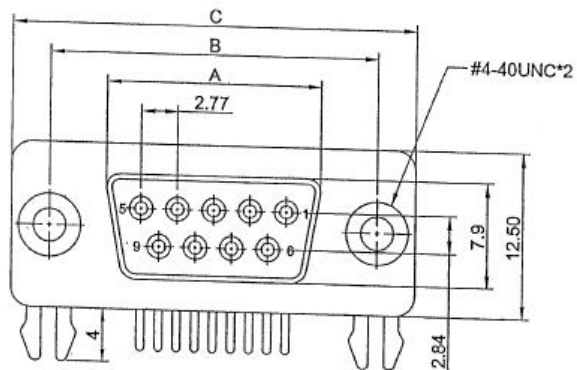


Figure A.3 DB37 Female

POSITION	A	B	C	D	E	F
62 PIN	54.8	63.50	69.40	2.41	1.20	7.00

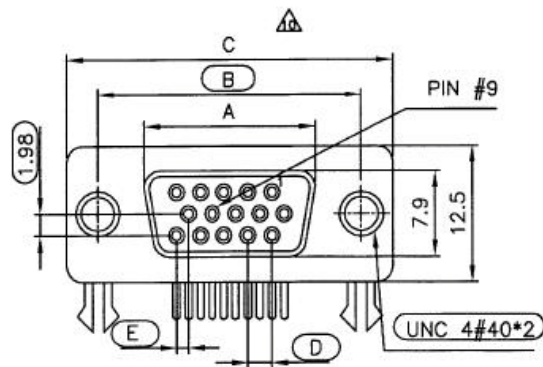


Figure A.4 DB62 Female

POSITION	A	B	C	D1	D2	E	F
78 PIN	67.16±0.38	61.11±0.25	52.40±0.20	2.41	2.08	10.72±0.25	14.1±0.25

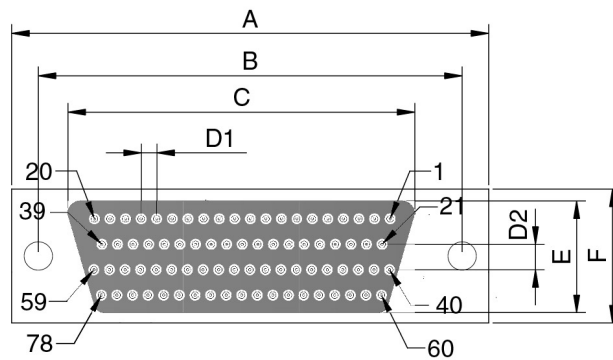


Figure A.5 DB78 Female

ADVANTECH

Enabling an Intelligent Planet

www.advantech.com

Please verify specifications before quoting. This guide is intended for reference purposes only.

All product specifications are subject to change without notice.

No part of this publication may be reproduced in any form or by any means, electronic, photocopying, recording or otherwise, without prior written permission of the publisher.

All brand and product names are trademarks or registered trademarks of their respective companies.

© Advantech Co., Ltd. 2015