


## bread:bit breakout board for micro:bit

PPMB00112

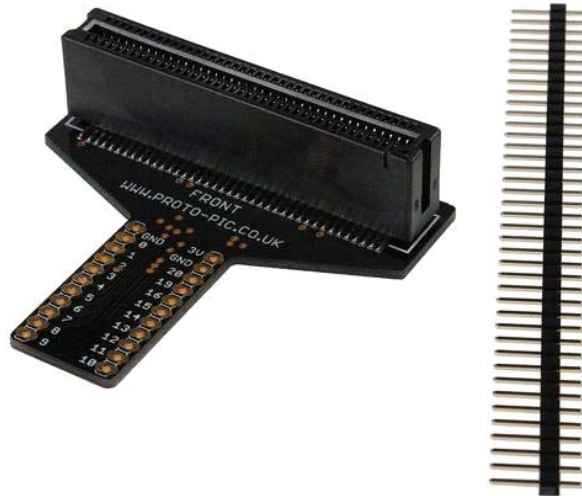

**The bread:bit makes it a breeze to connect your micro:bit to your breadboard.**

Simply solder the provided male headers and seat it in the middle of your breadboard. Alternatively you can solder female headers (not included) should you wish.

This board comes pre-populated with an 80 way surface mount edge connector.

If you don't want to solder them yourself we have the option of doing it for you above.